








# Instalation manual


Wardrobe: 240x200

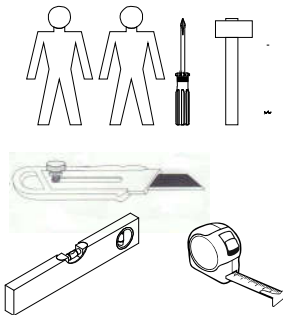


Element symbol	Dimensions			pcs	Code	Package
1	2368	640	16	1	SZAF A240x200.003	1/4
2	2368	640	16	1	SZAF A240x200.004	1/4
3	2002	640	16	1	SZAF A240x200.005	3/4
4	2002	640	16	1	SZAF A240x200.006	3/4
5	2368	531	16	1	SZAF A240x200.007	2/4
6	2368	531	16	1	SZAF A240x200.008	2/4
7	808	531	16	2	SZAF A240x200.009	4/4
8	564	531	16	4	SZAF A240x200.010	4/4
9	2386	824	3	1	SZAF A240x200.001	1/4
10	2386	581	3	2	SZAF A240x200.002	1/4
11	556			2		
12	800			1		

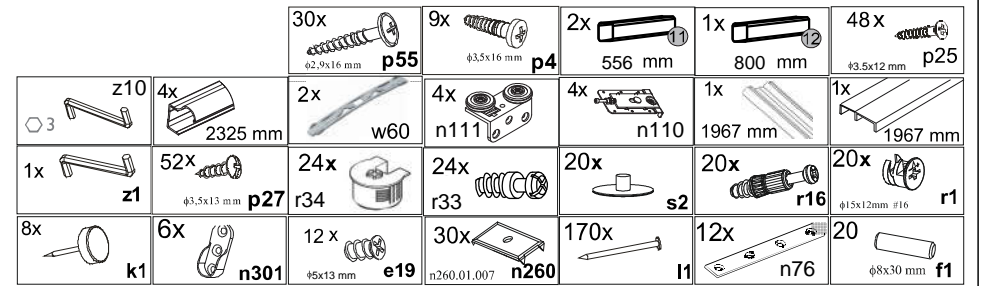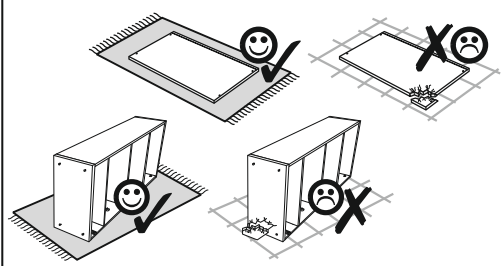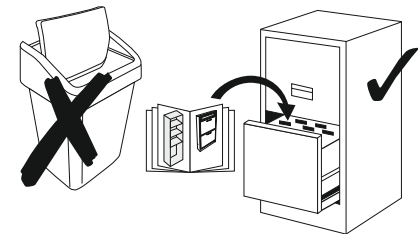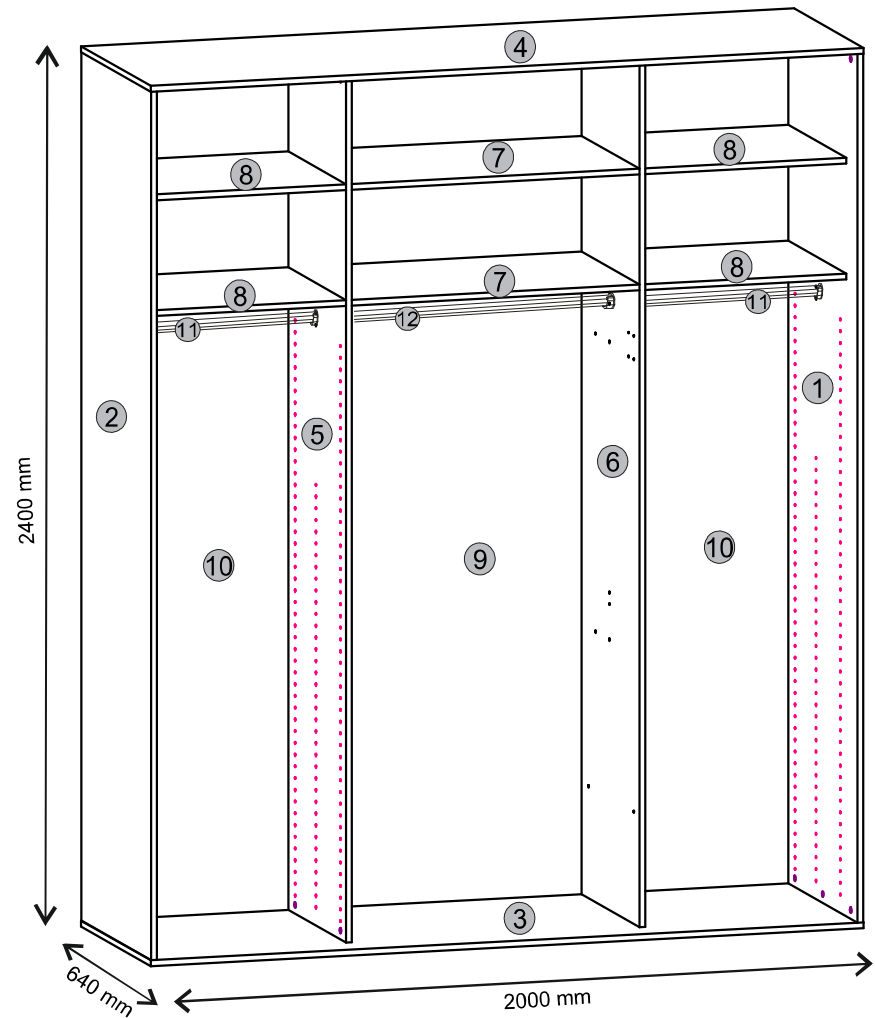


# 1

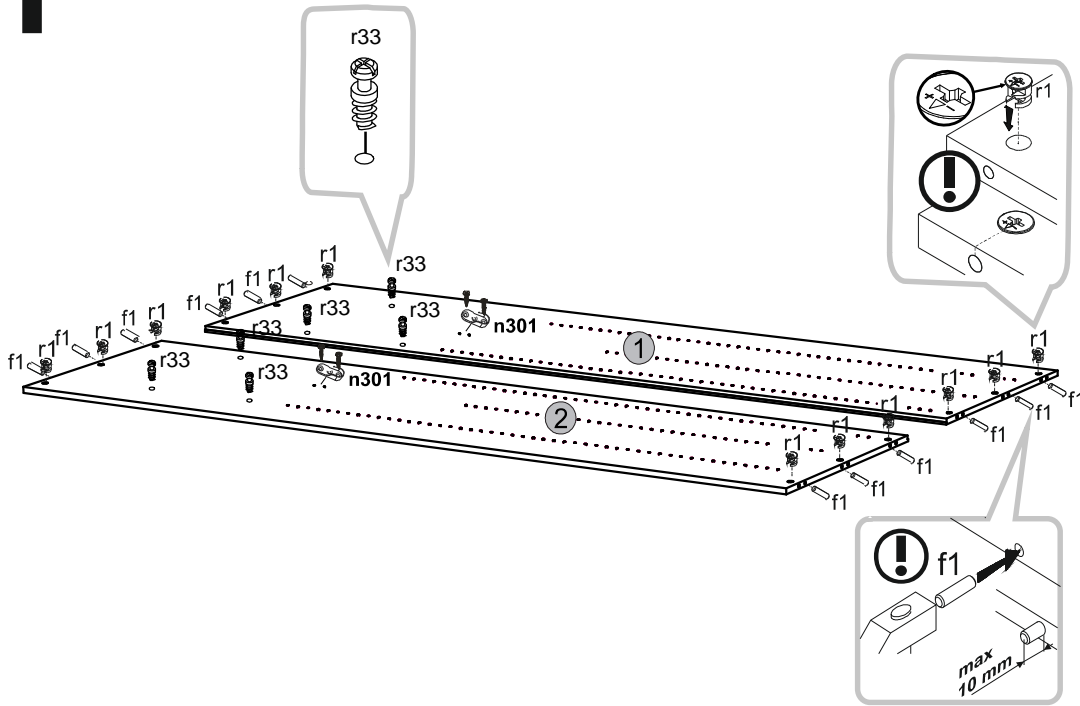


# 3




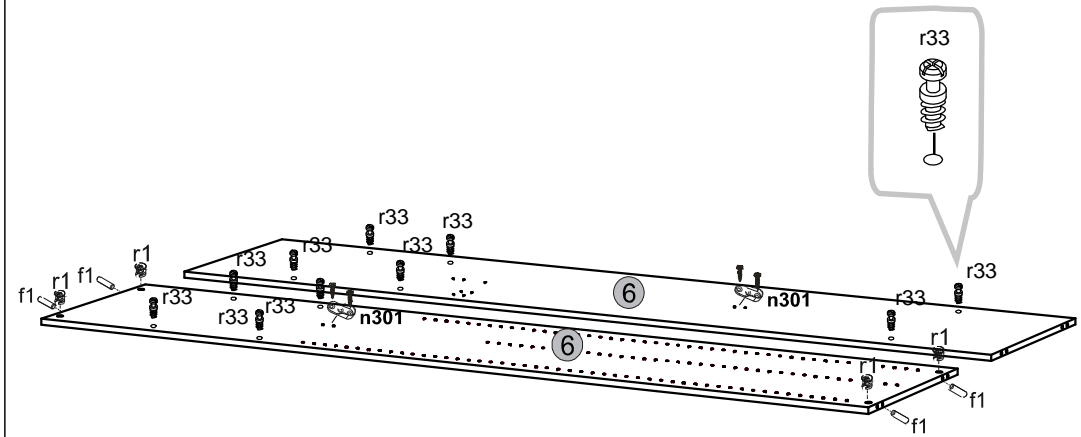


# 2


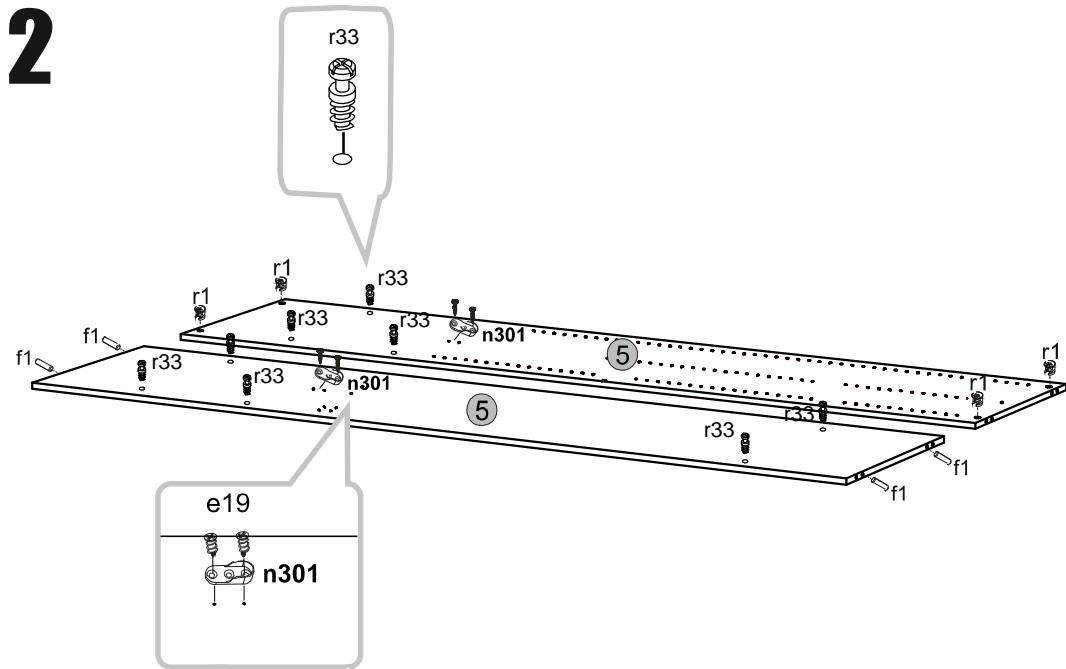


# 4


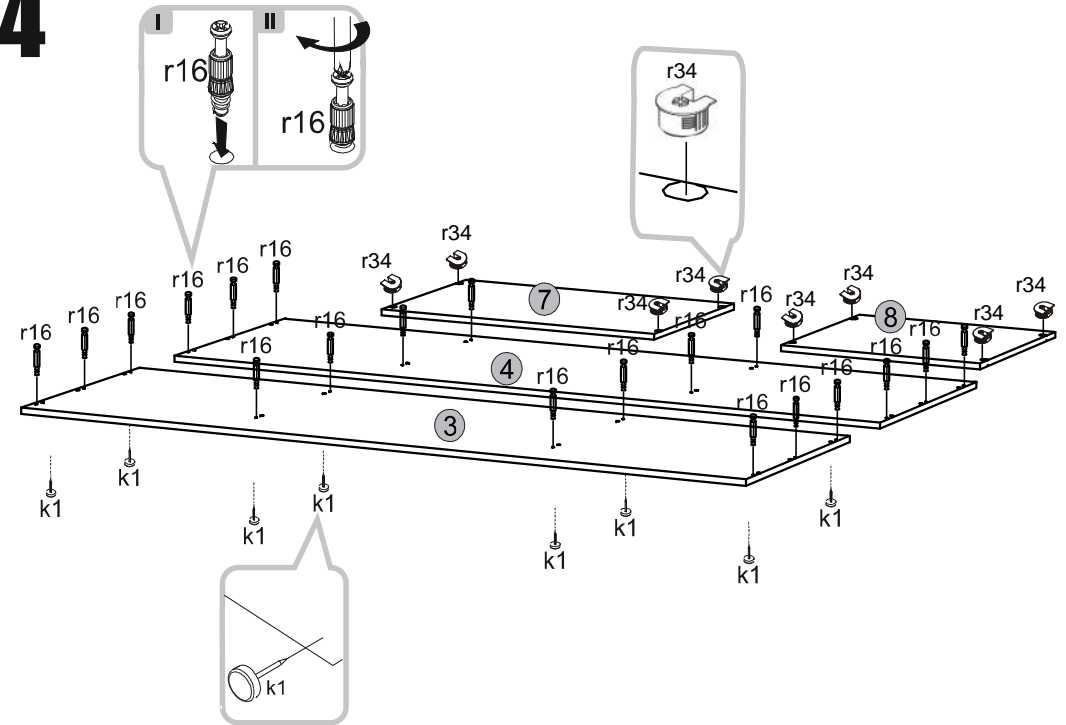


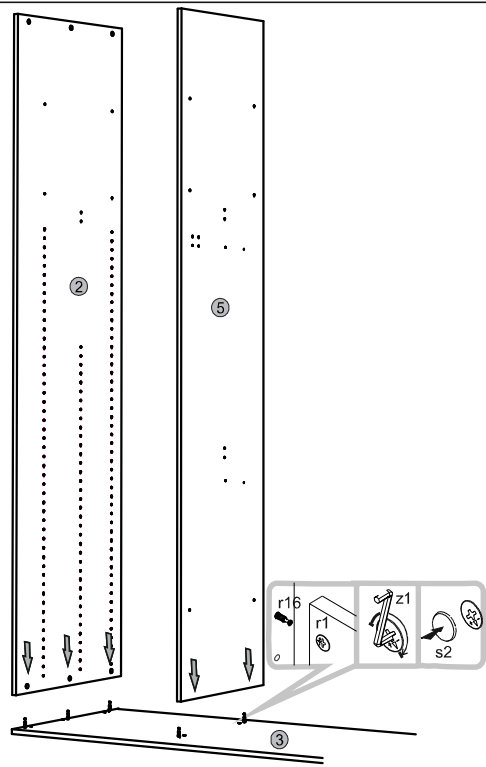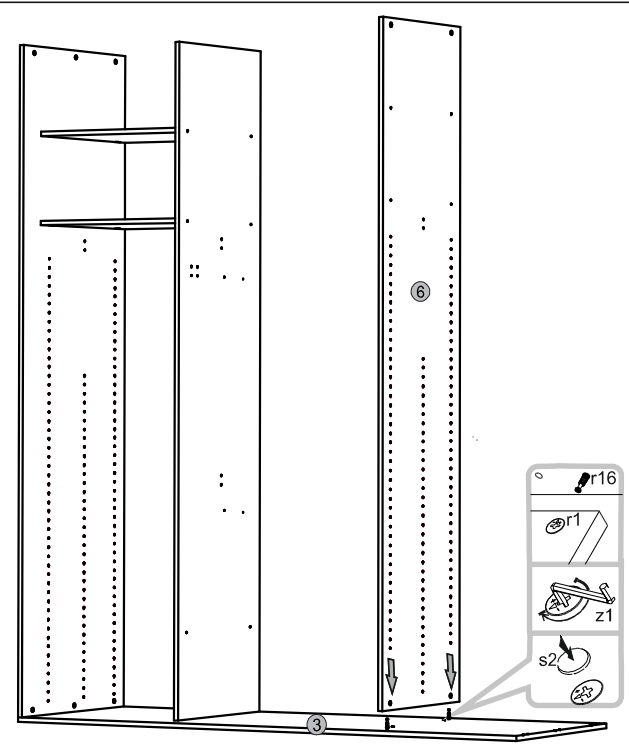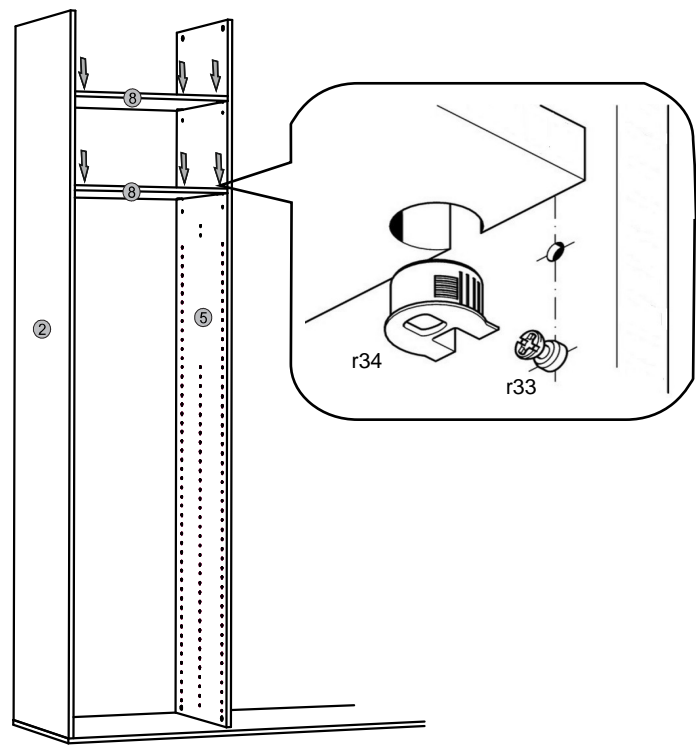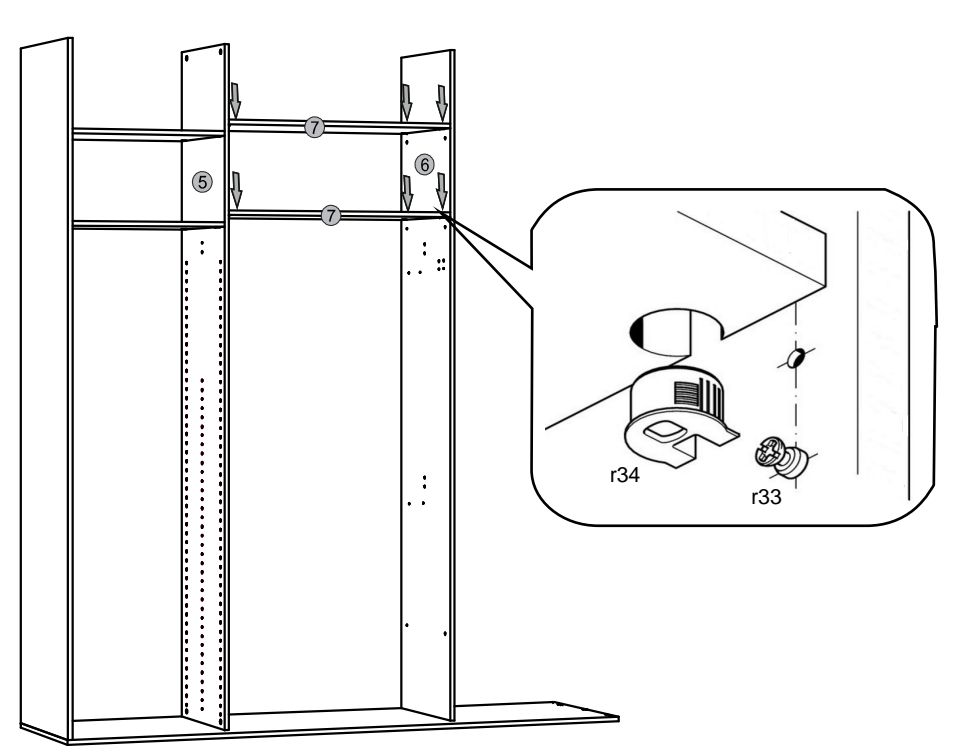**5****7****6****8**



# 9

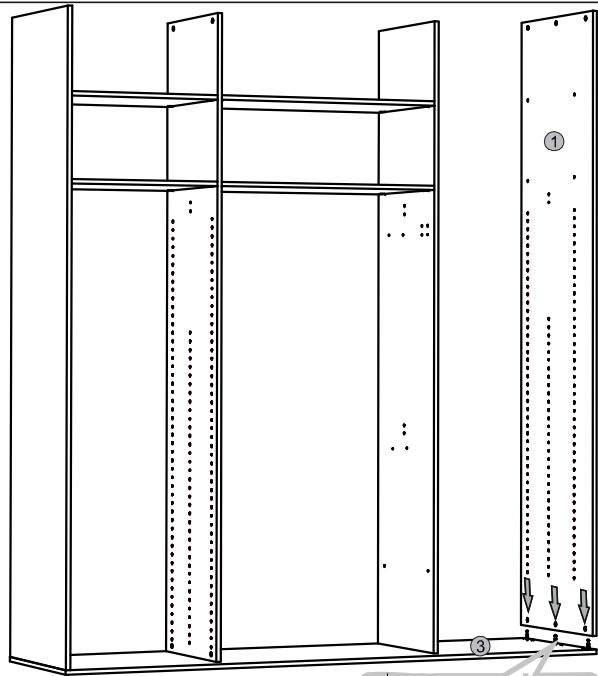




# 11

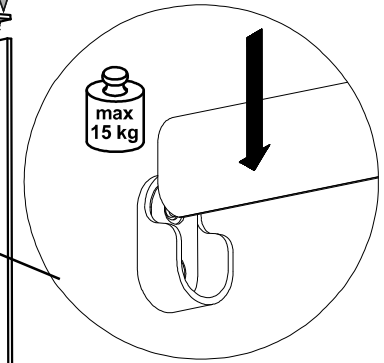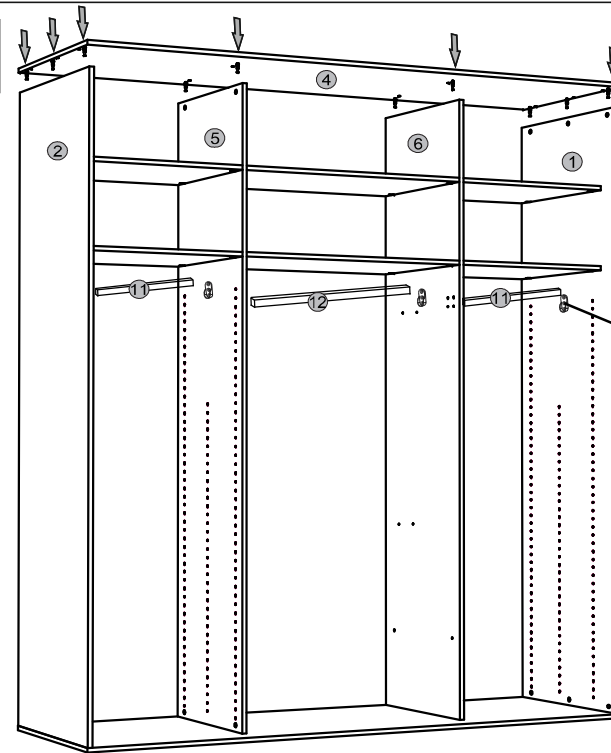

# 10

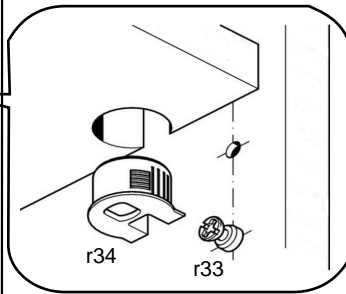
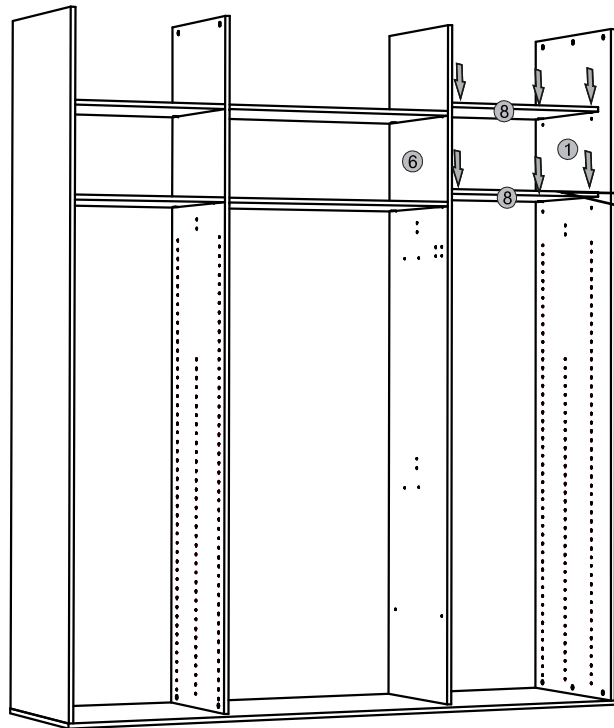


# 12

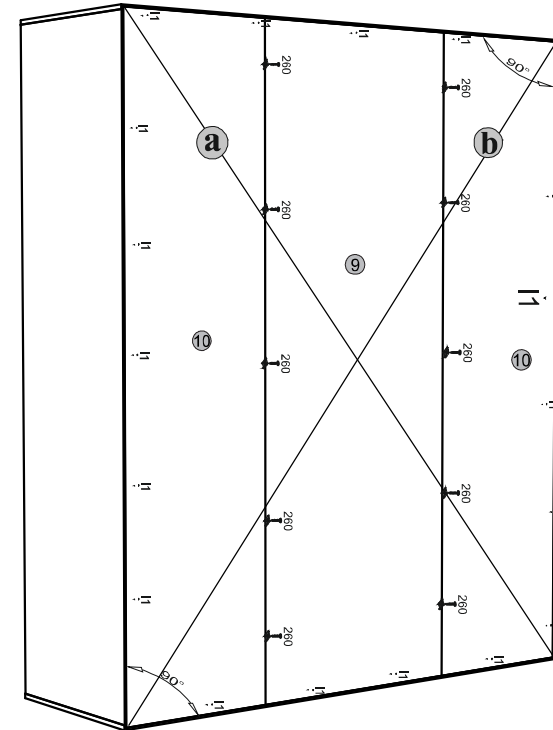

# 13

Element symbol	Dimensions			pcs	Code	Package
13	999	581	16	6		p.
14	999	581	16	2		p.
15	2325			4		

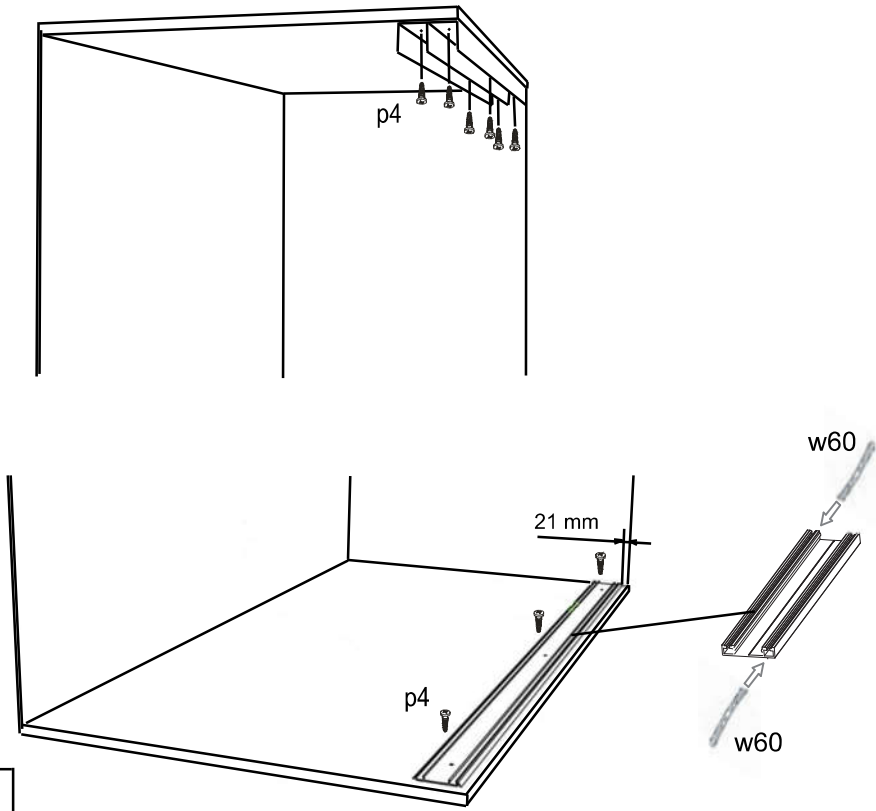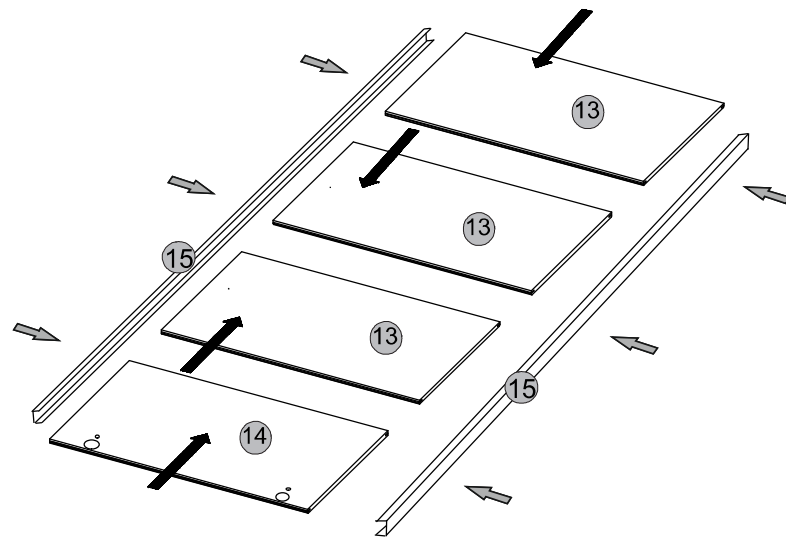

# 14

