




PRATO 100

KOMFORT


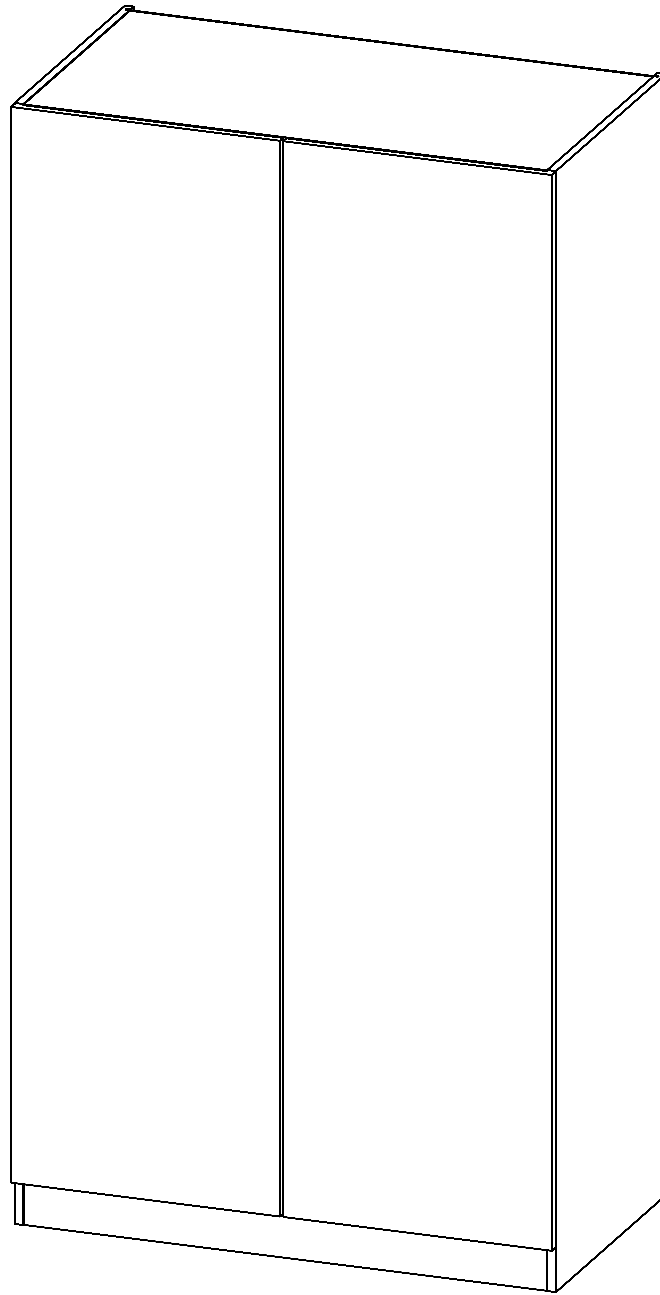



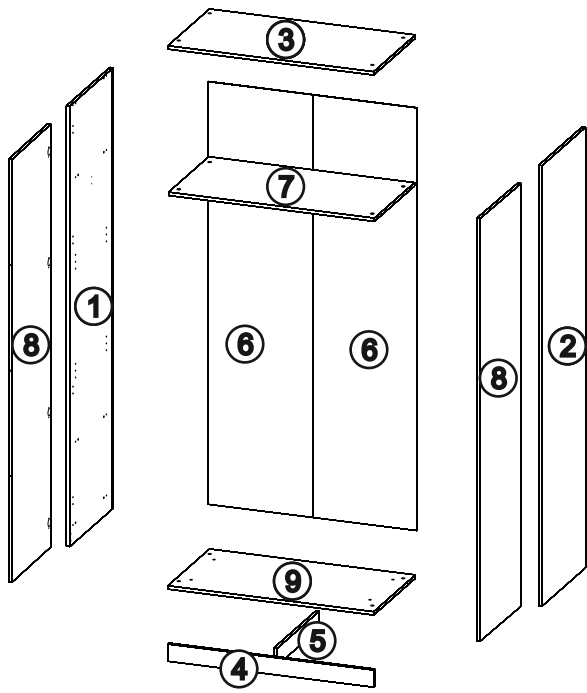




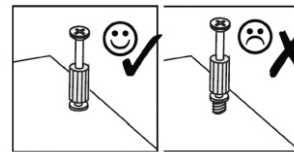Z1 D1		0000 x8
C2		0000 x4
K14		0000 x6
G2		0000 x18
T17		1267 x1
P2		1014 3,5x13 x2
J11		1267 x1
x 2 kpl		
U51		1754 x1
A2		1542 x2
B1		1018 8x28 x16
T1		1336 x12
M1		1336 x12
S5		1063 4x16 x32
J23		1302 x8
F36		1305 x6
C4		0000 x4





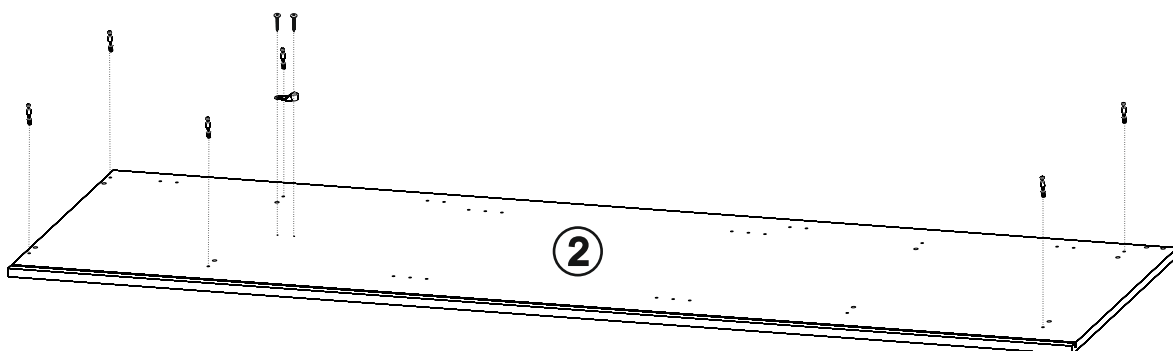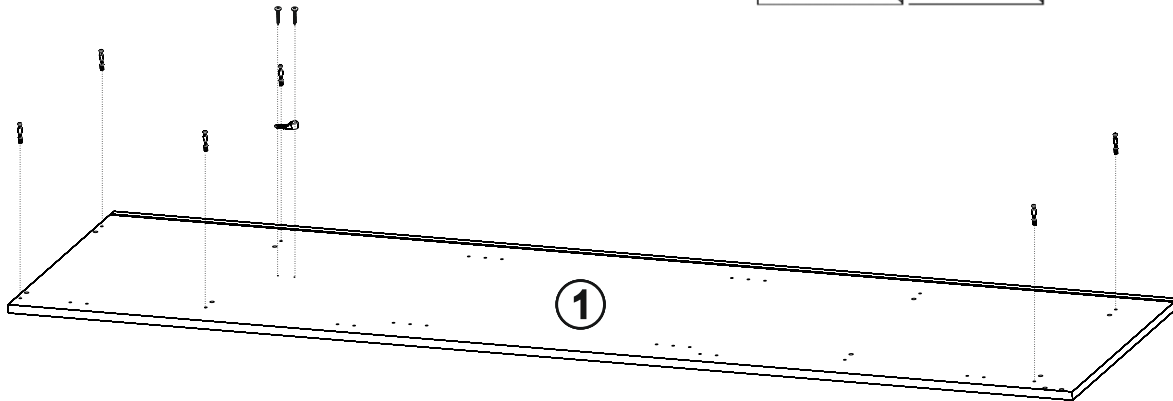

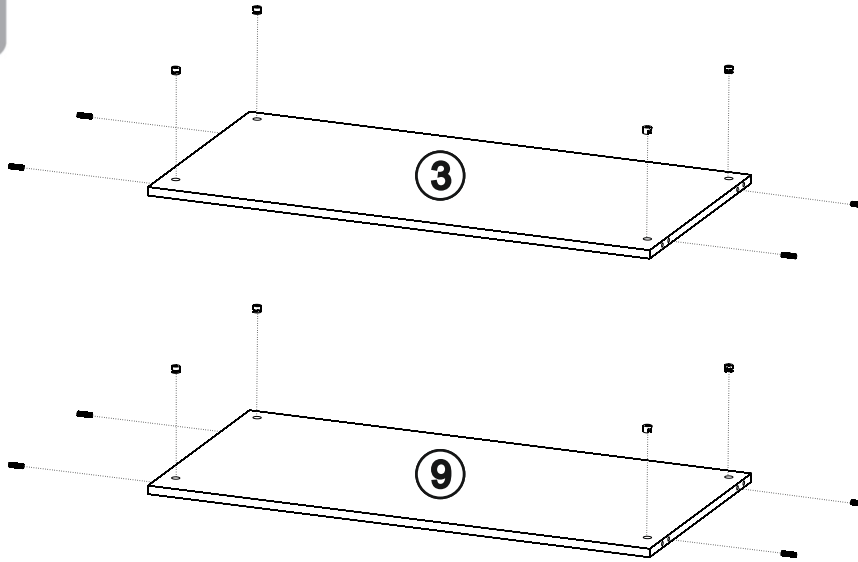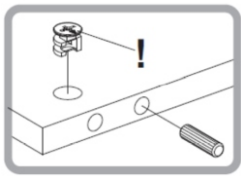


T1		1336 x12
S5		1063 4x16 x4
A2		1542 x2





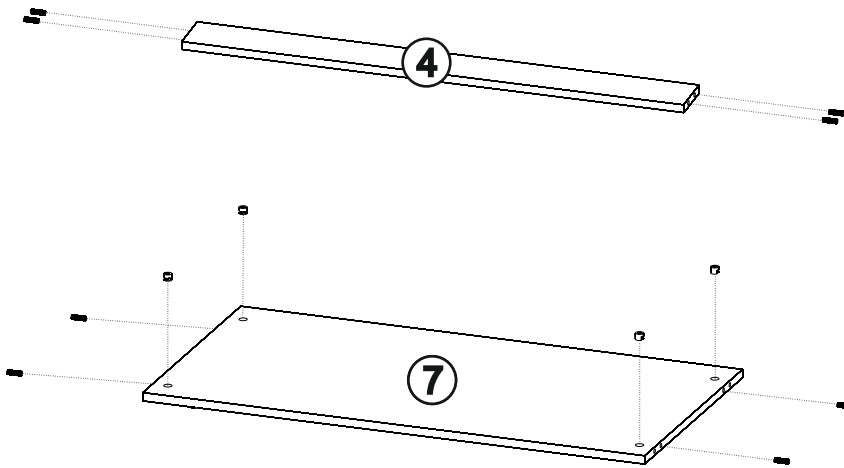
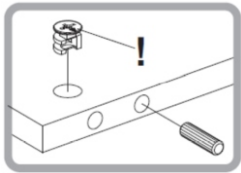





B1		1018
	8x28	x8
M1		1336
		x8



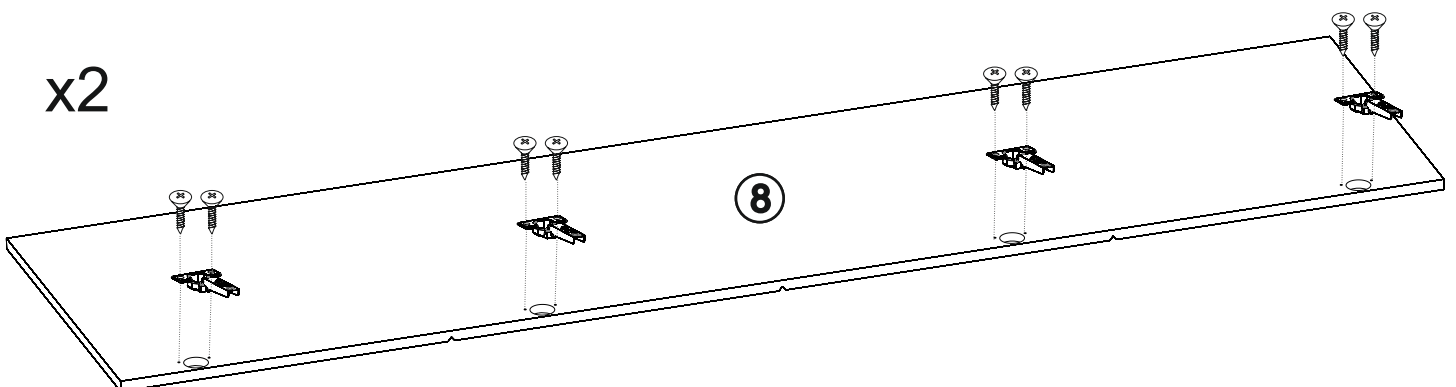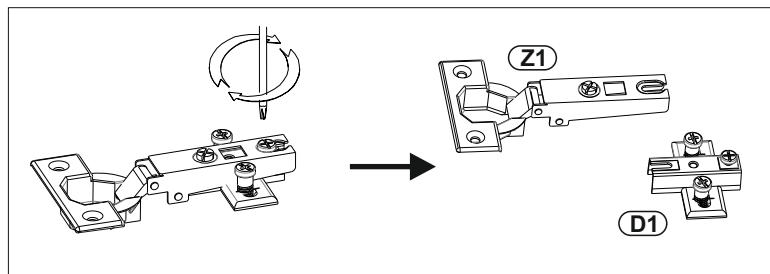


B1		1018
	8x28	x8
M1		1336
		x4
Z1		0000
D1		x8
S5		1063
	4x16	x16

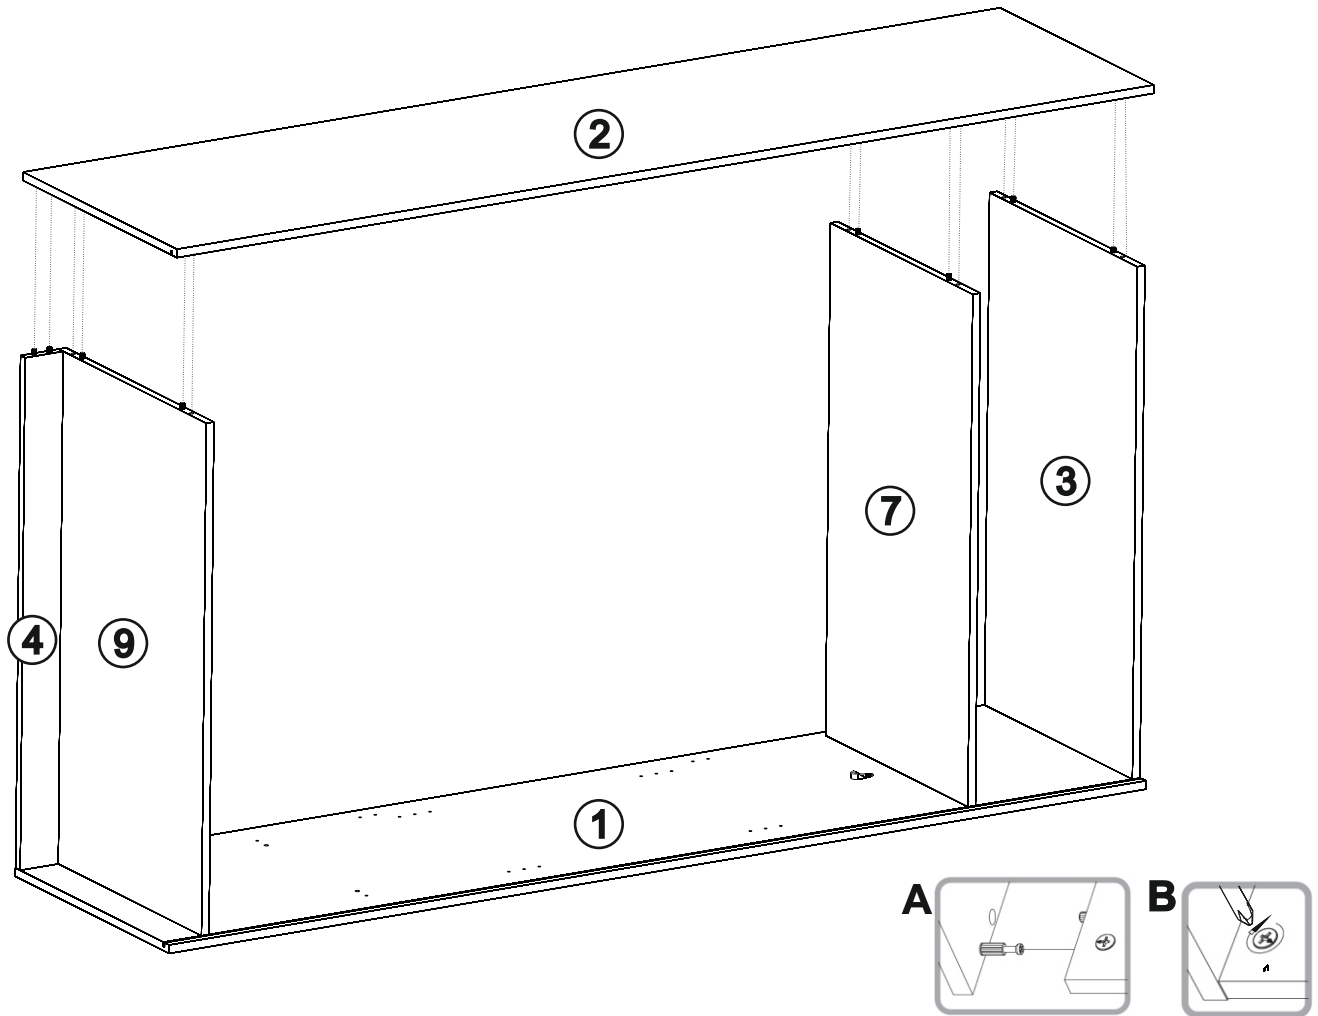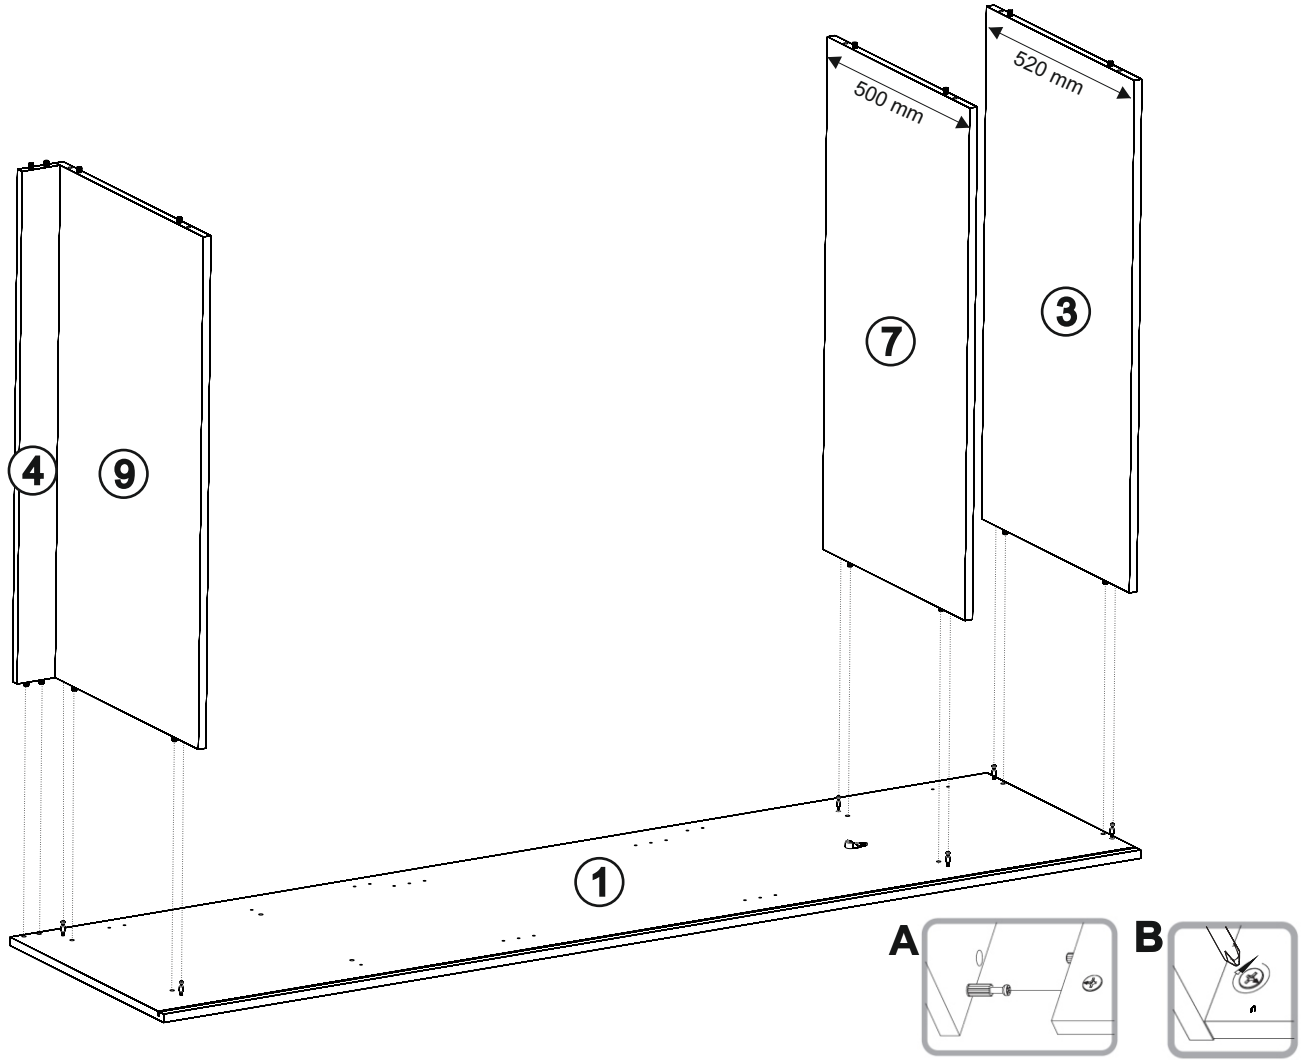

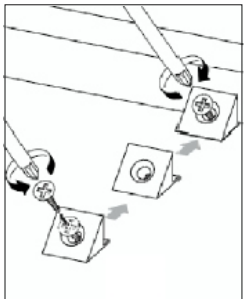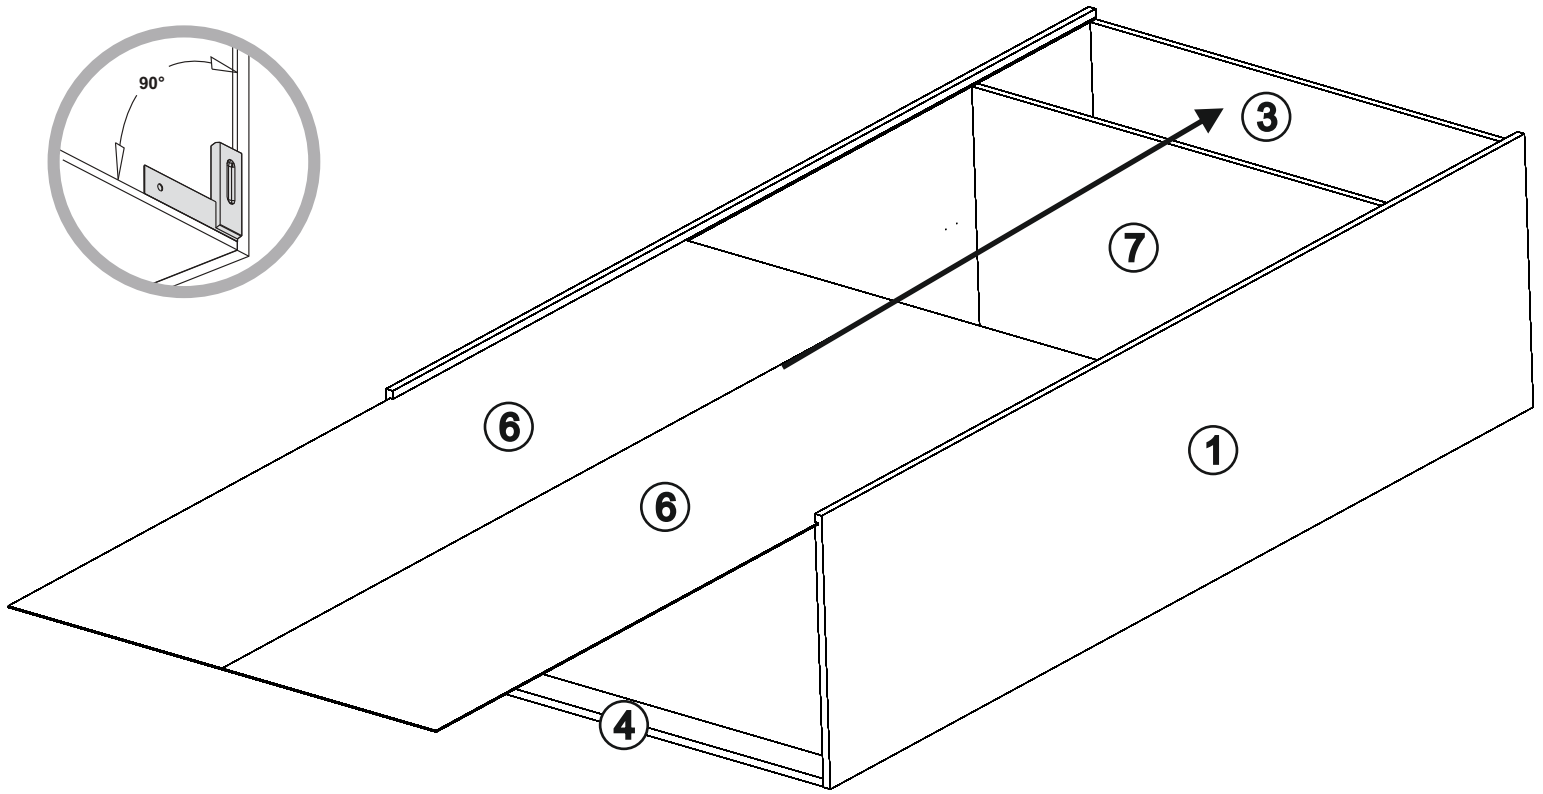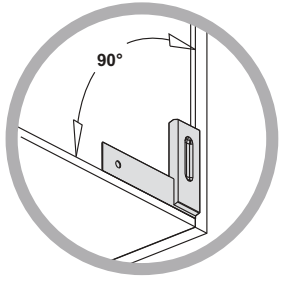








J23		1302
		x8
G2		0000
		x18

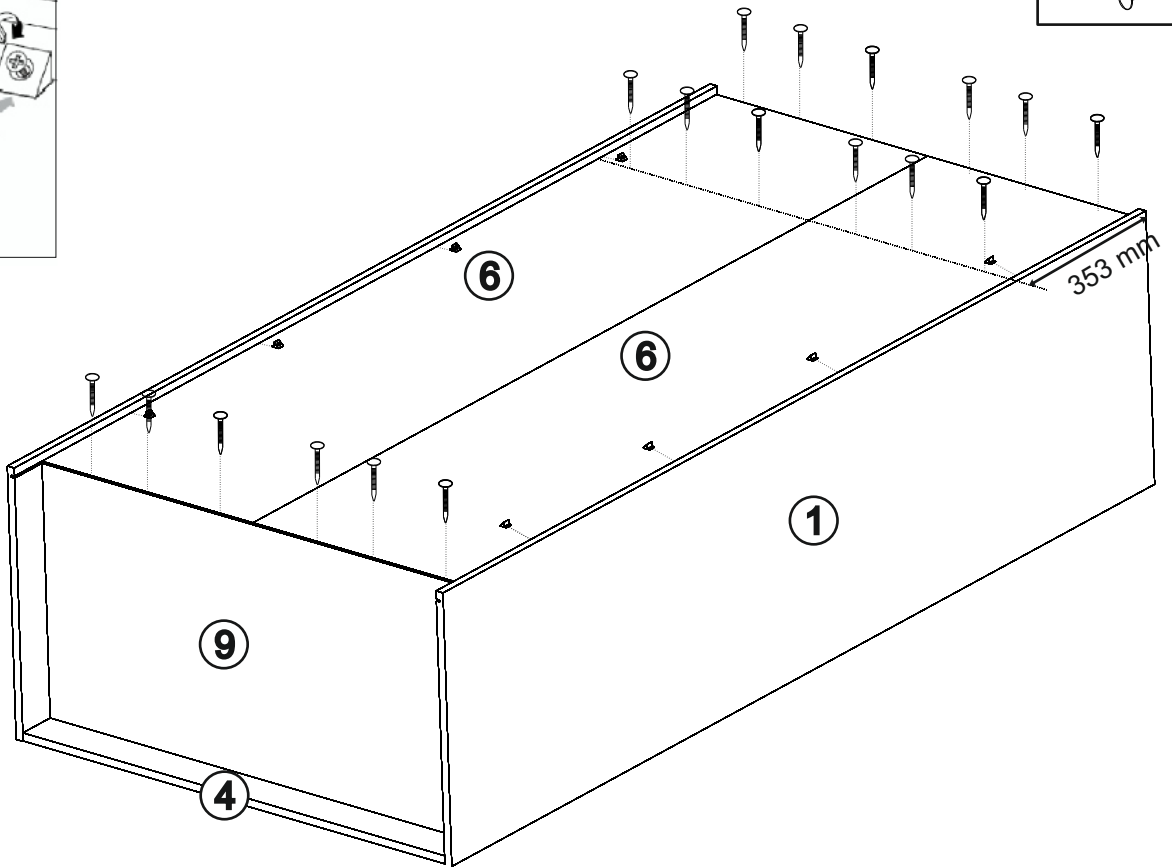




K14  0000
x6

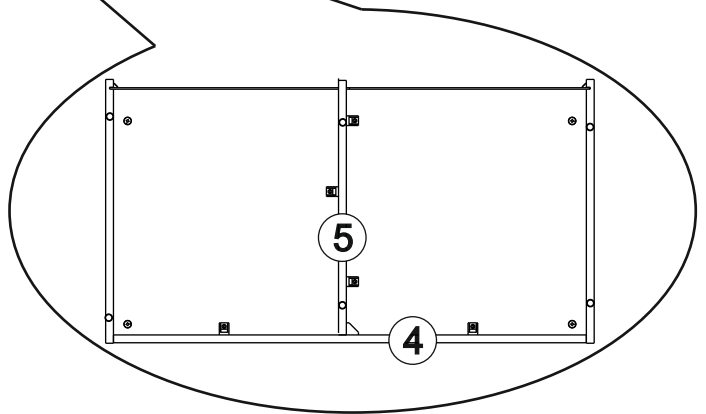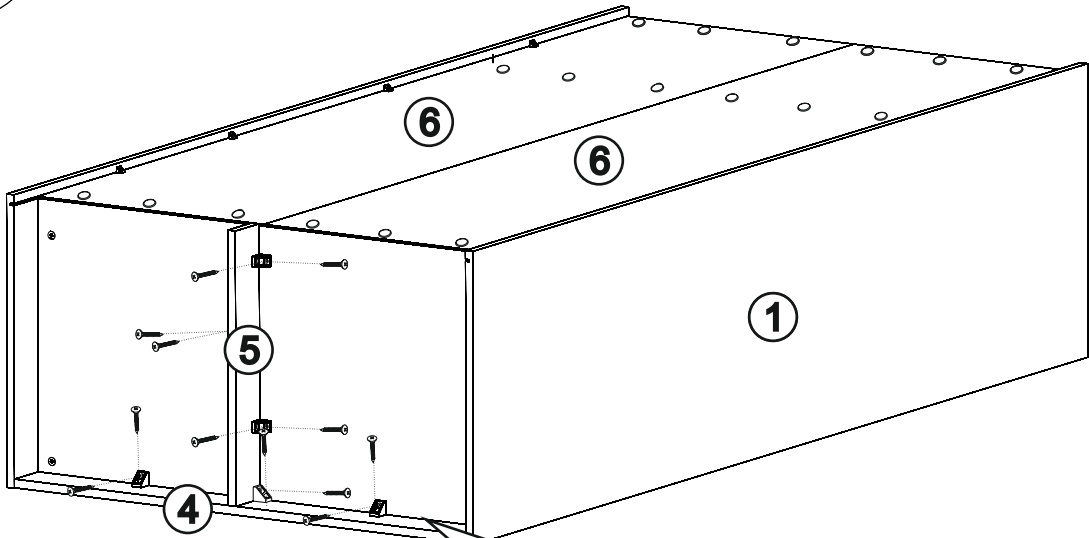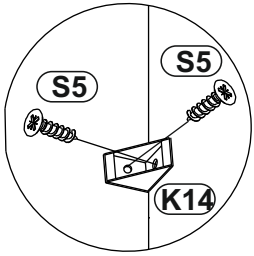
S5  1063
4x16 x12

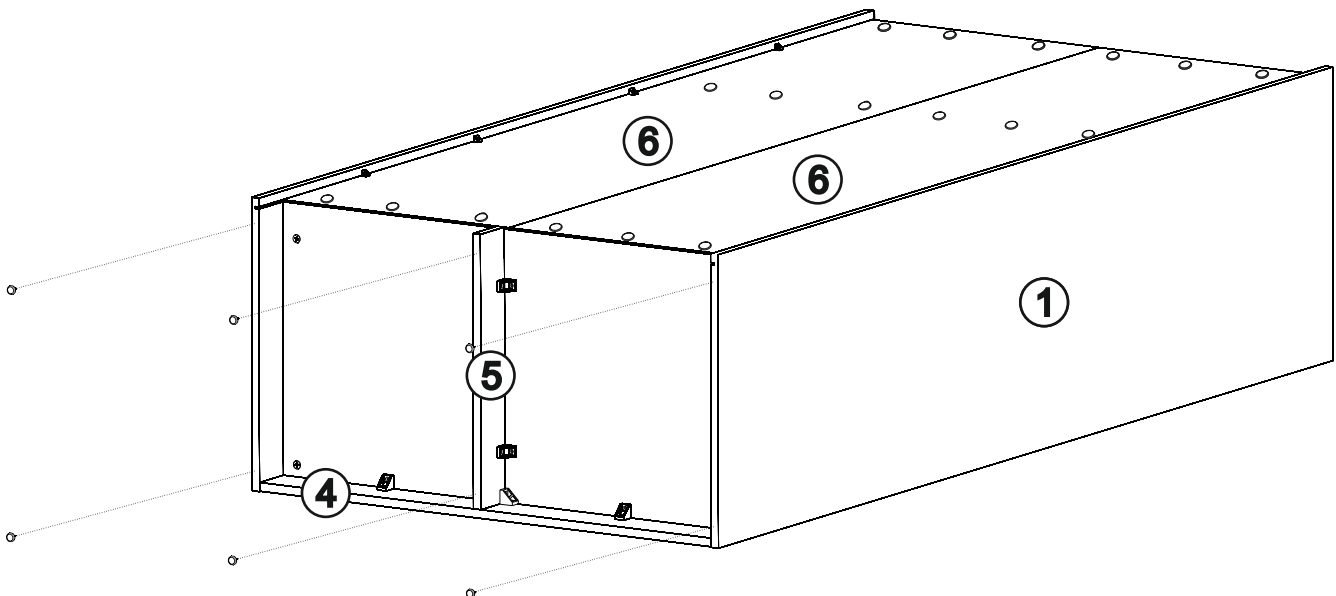



F36  1305
x6




U51	1754
	x1
D1	0000
	x8

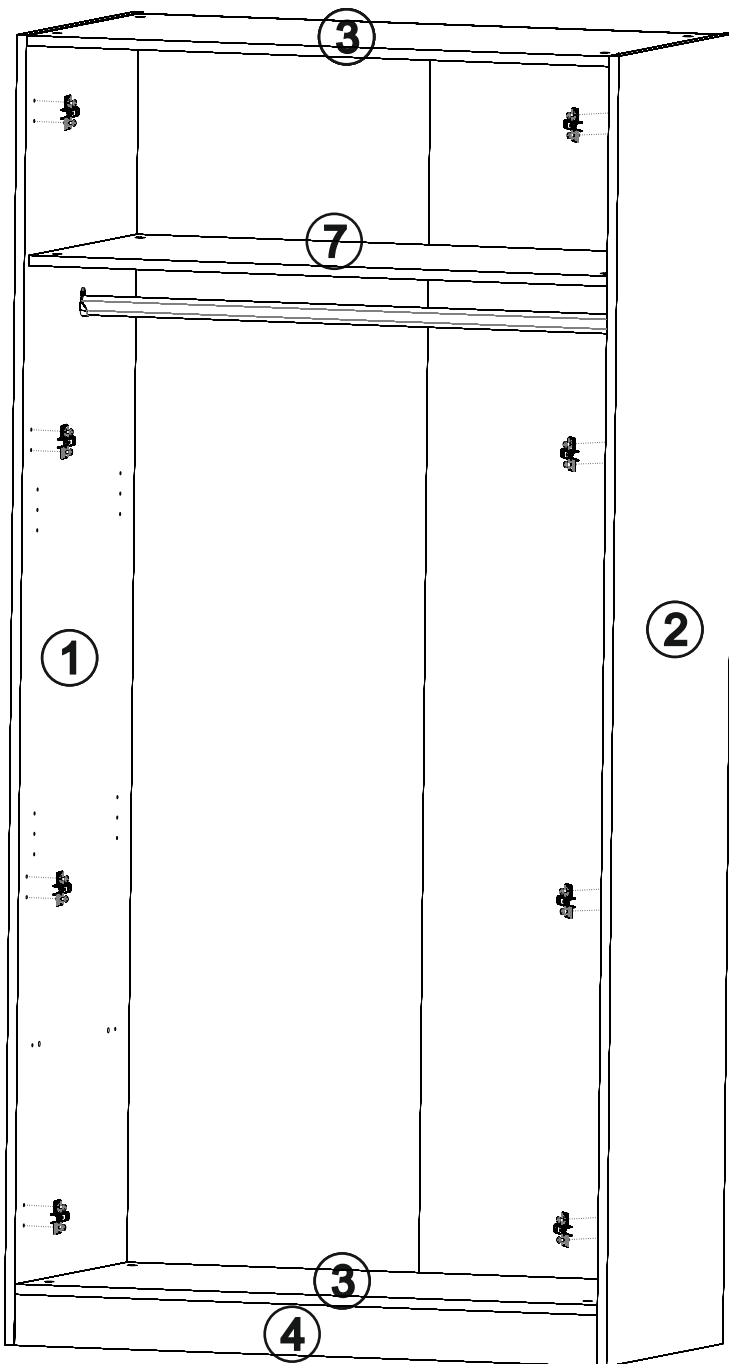






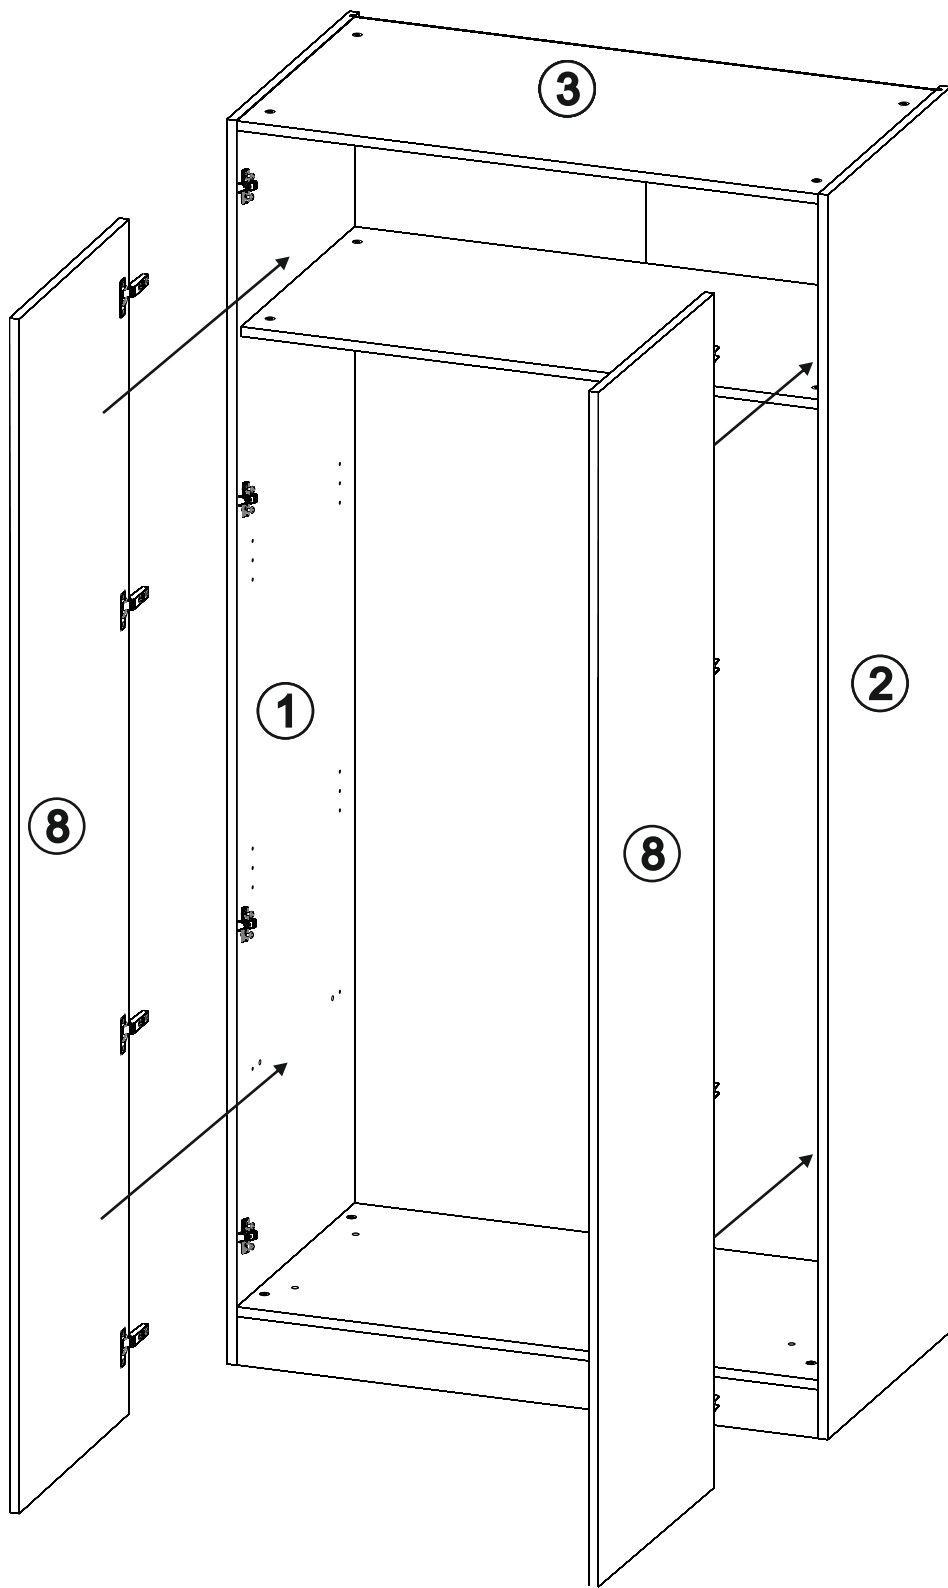


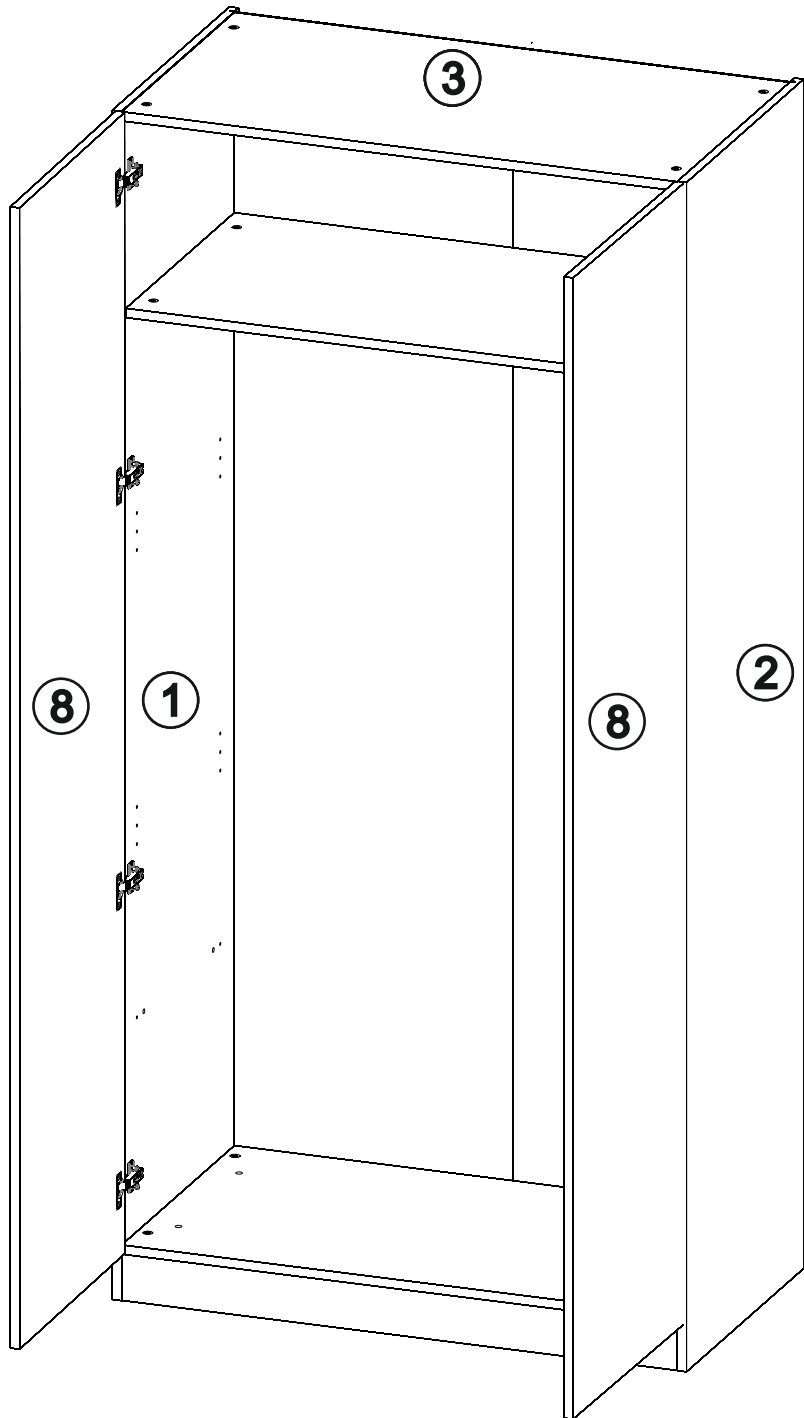

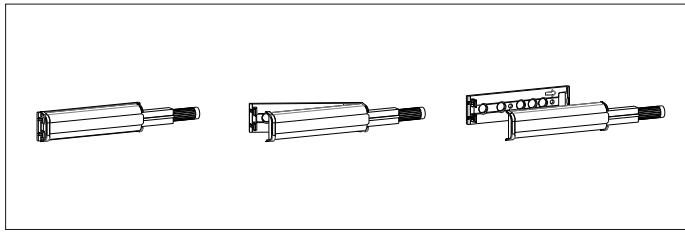

OPCJA Z ODBOJNIKIEM

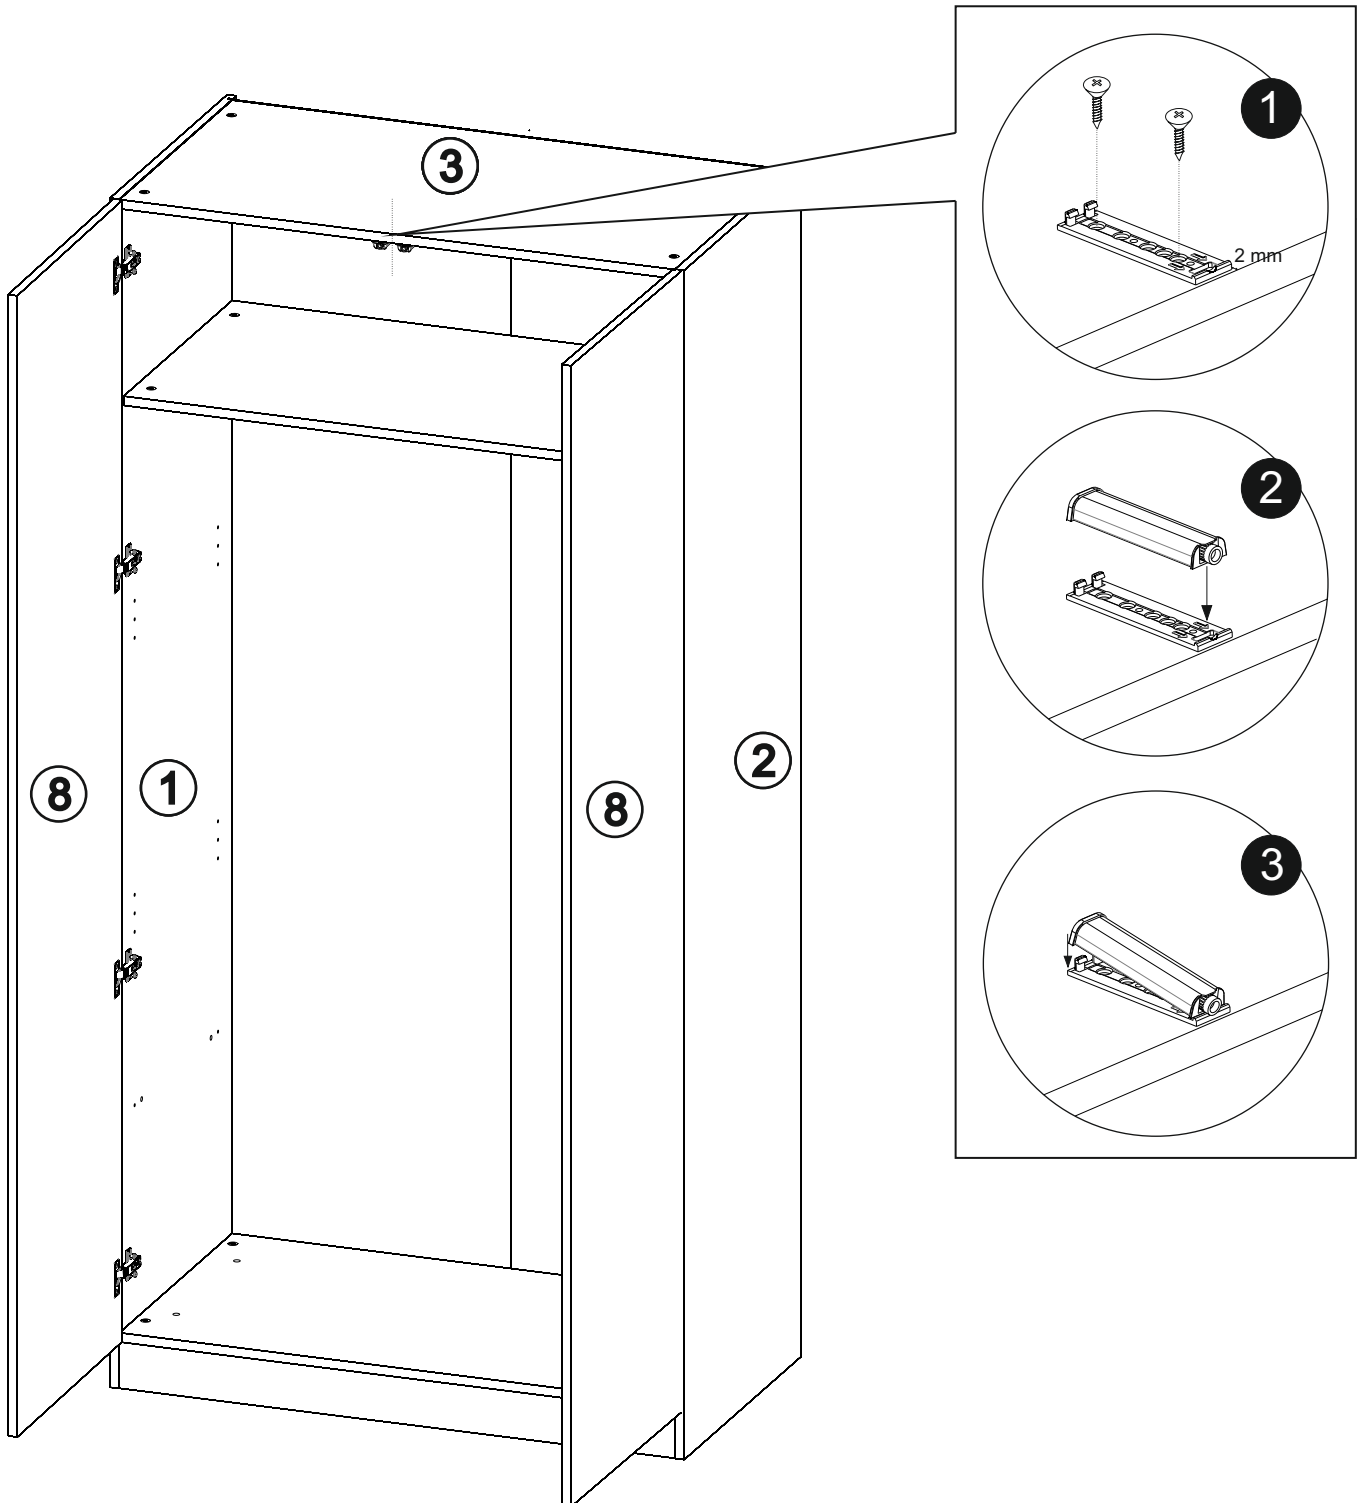

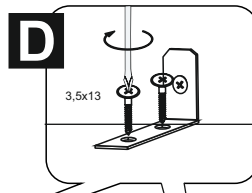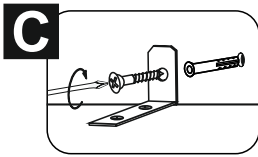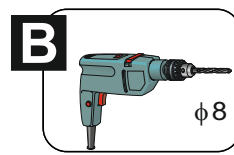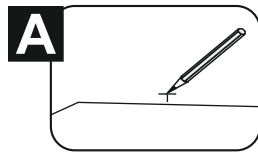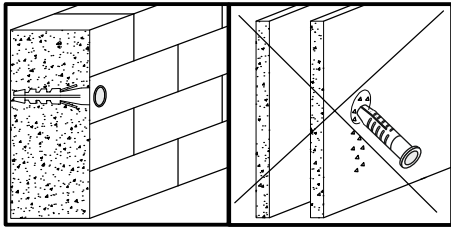

T17		1267	x1
P2		1014	x2
J11		1267	x1
			x 2 kpl
C2		0000	x4
C4		0000	x4

