



## NOVA PRO

- PL SZAFKA BOCZNA
- EN SIDE CABINET
- CZ POSTRANNÍ SKŘÍŇKA
- SK POSTRANNÁ SKRINKA
- BG ШКАФЧЕ СТРАНИЧНО
- UA ШАФА БОКОВА
- RU ШКАФЧИК БОКОВОЙ
- RO DULAPIOR LATERAL
- HU OLDALSÓ SZERÉNY







INSTRUKCJA MONTAŻU  
INSTALATION INSTRUCTION  
NÁVOD NA MONTÁŽ  
NÁVOD PRE MONTÁŽ  
ИНСТРУКЦИЯ ЗА МОНТАЖ  
ИНСТРУКЦІЯ З МОНТАЖУ  
ИНСТРУКЦИЯ МОНТАЖА  
INSTRUCȚIE A MONTJULUI  
ÖSSZESZERELÉSI ÚTMUTATÓ





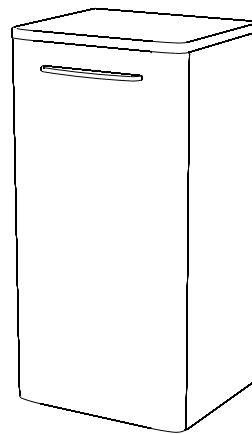








88428; 88437

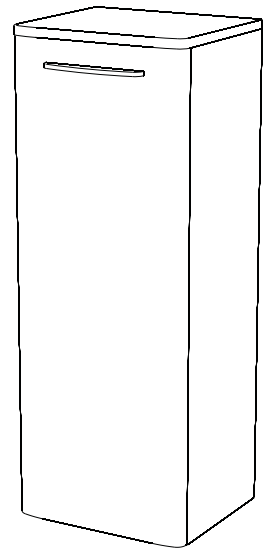


88427; 88436

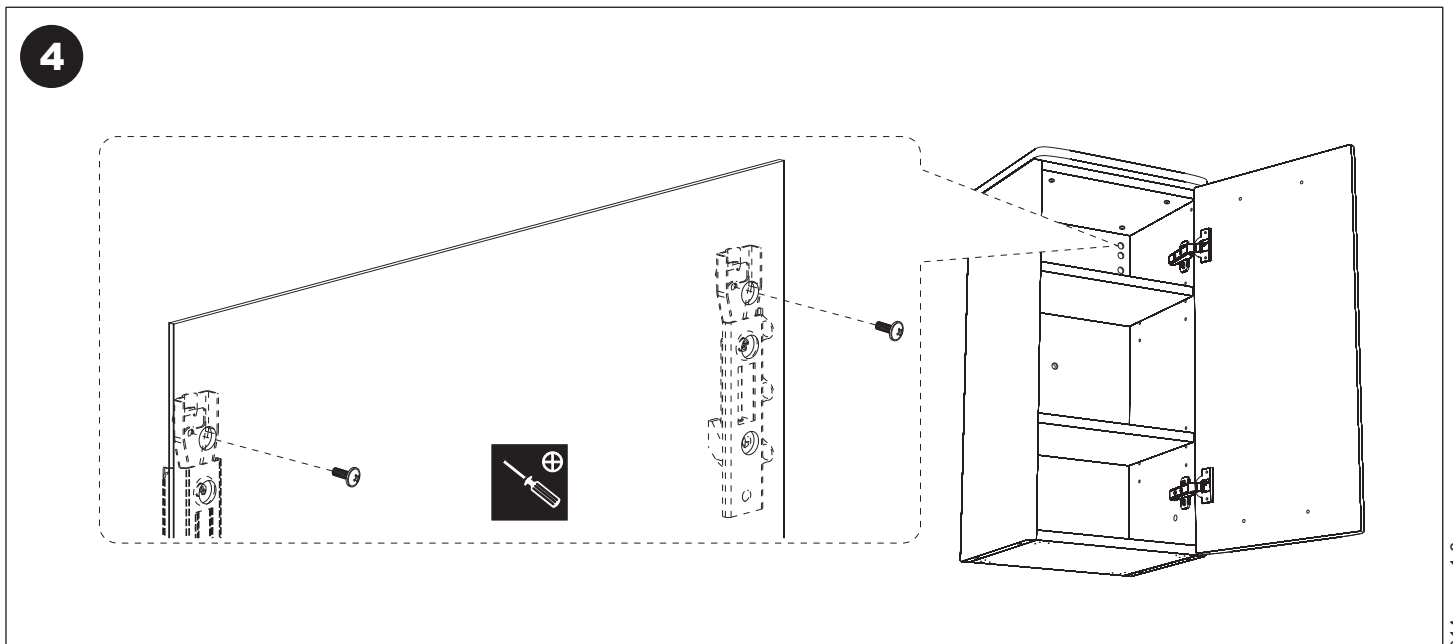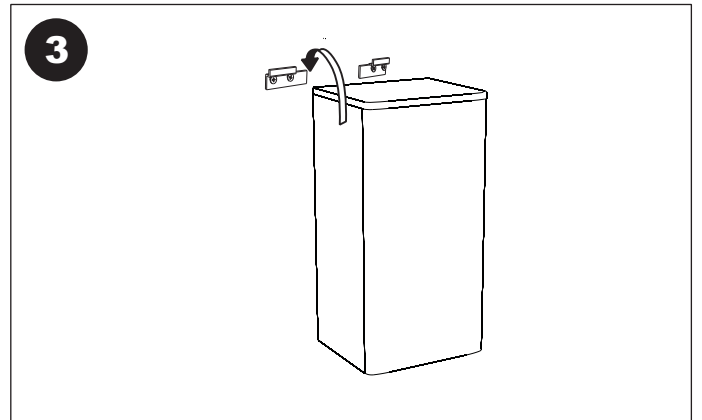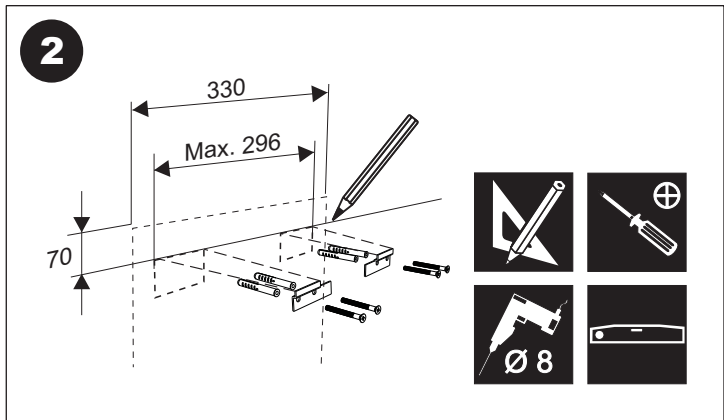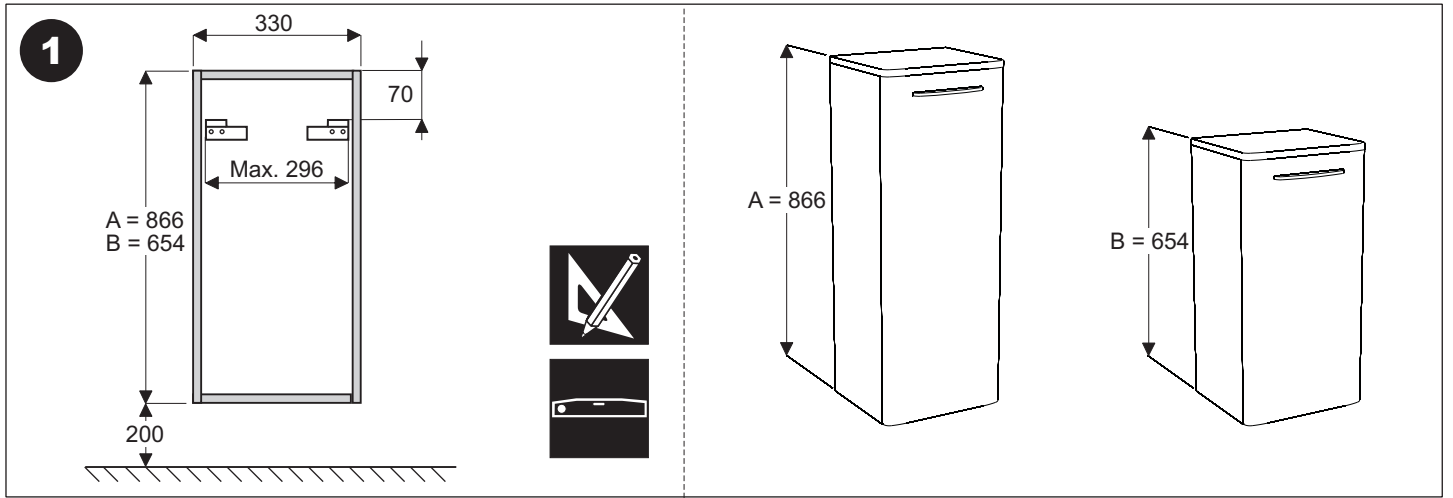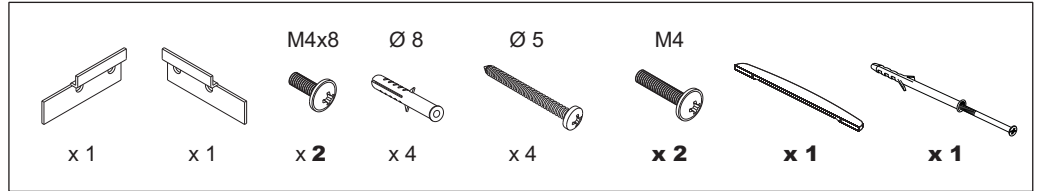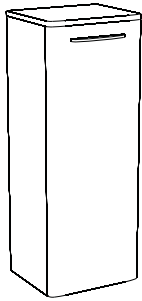

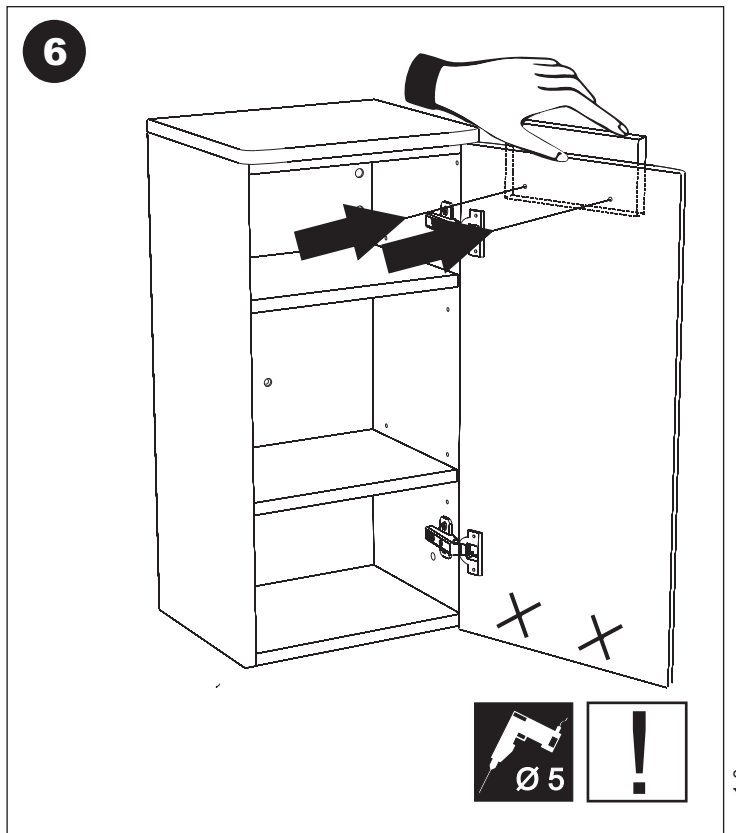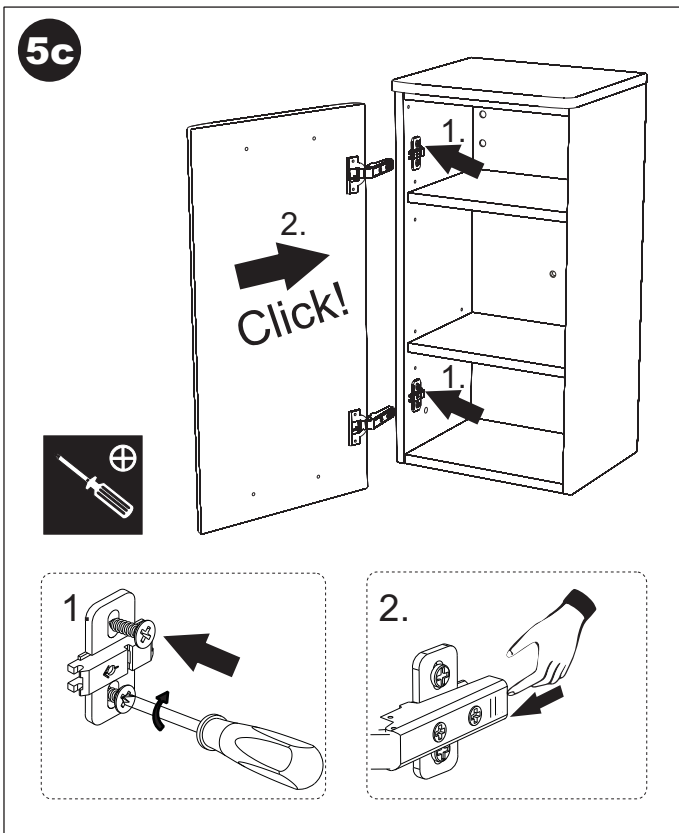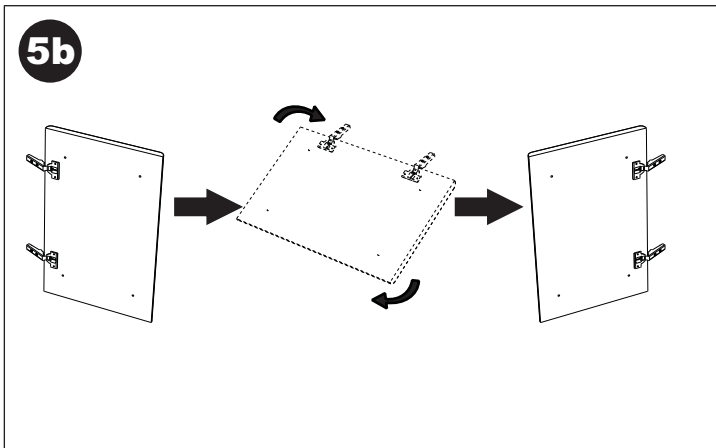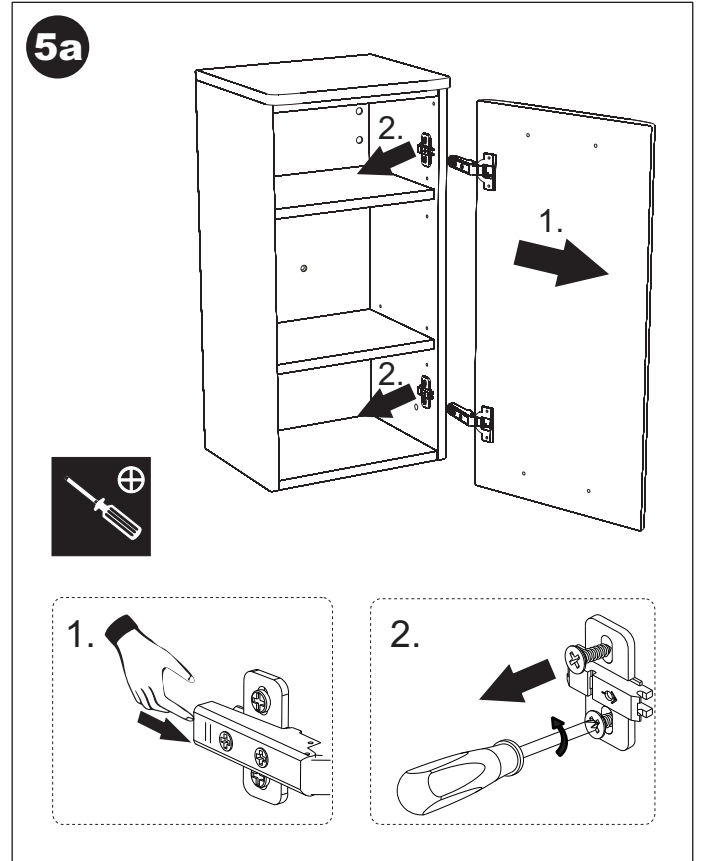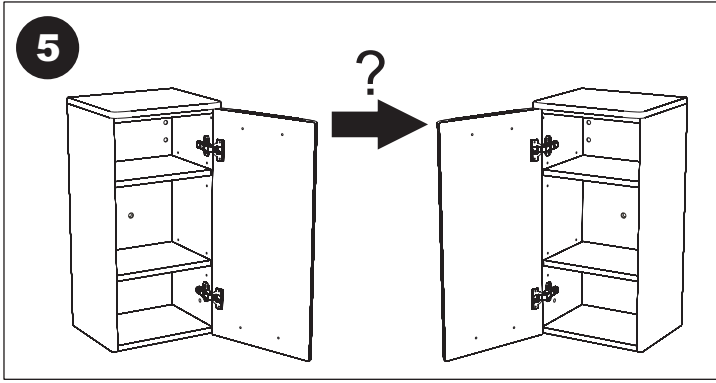


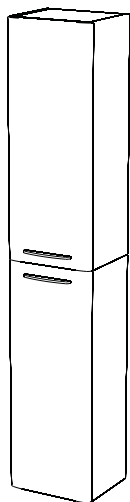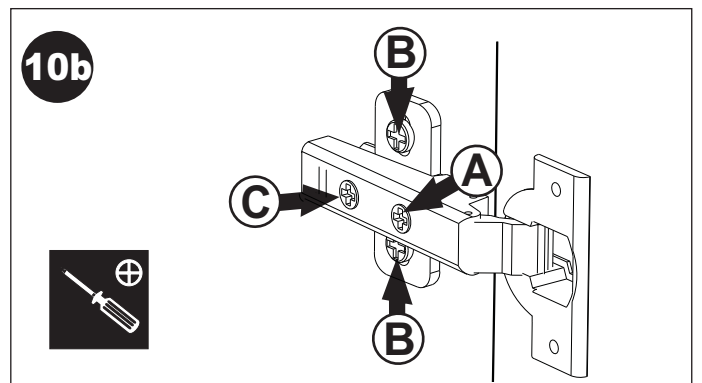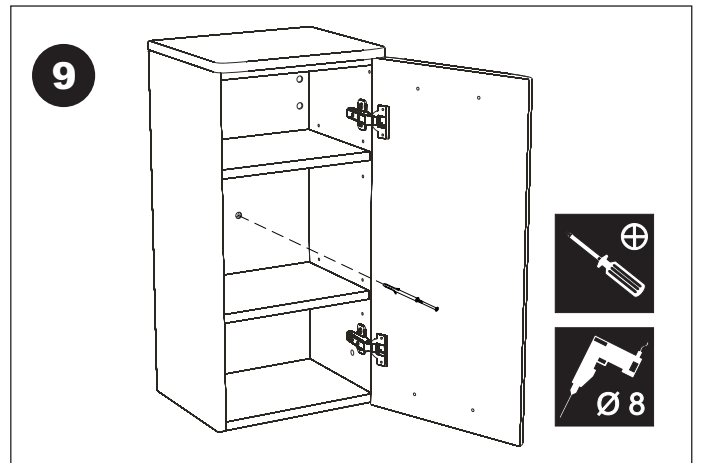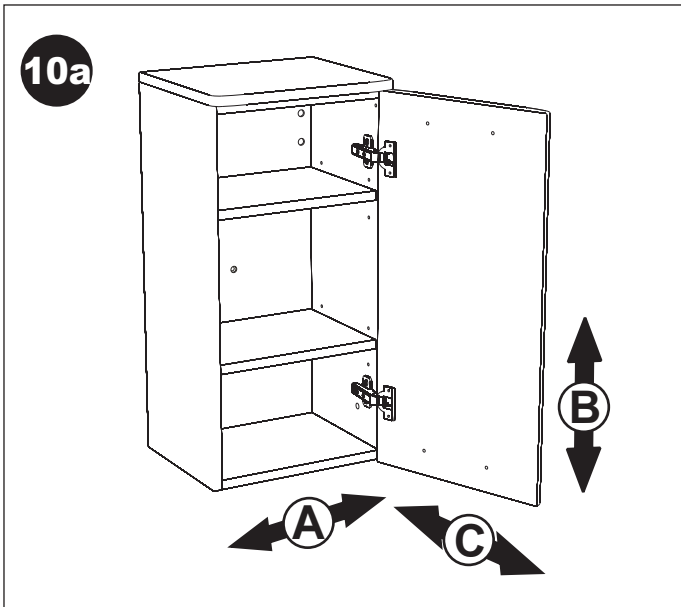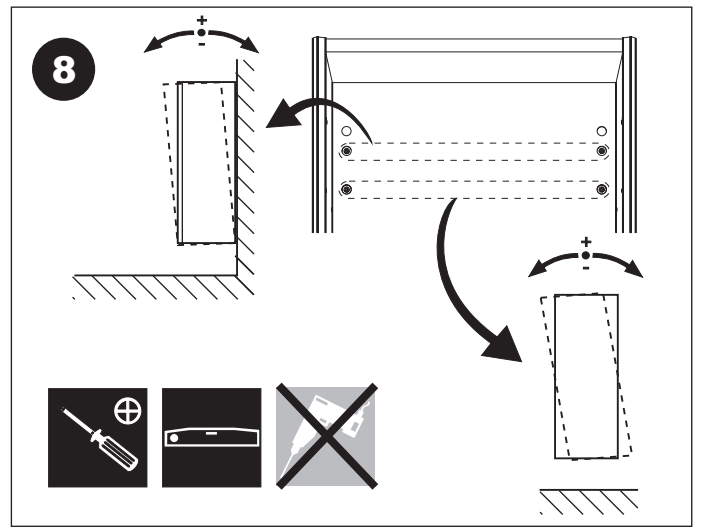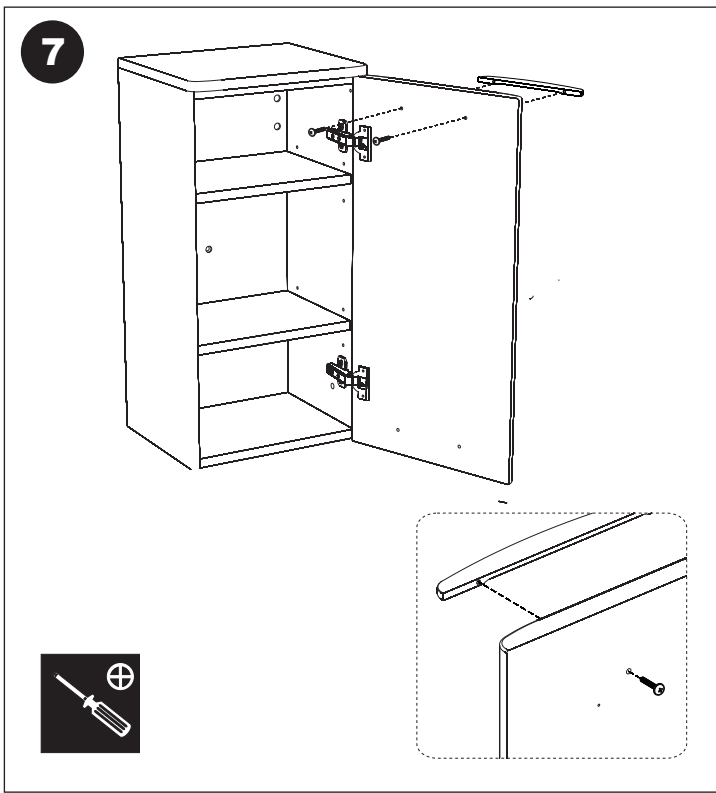


2 x 88427  
2 x 88436

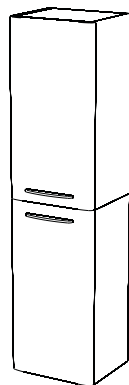








2 x 88428  
2 x 88437

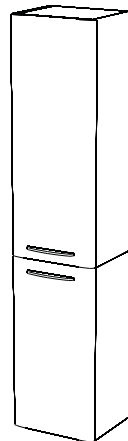


88427 + 88428  
88436 + 88437

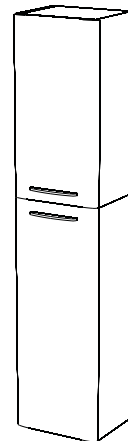


88428 + 88427  
88437 + 88436

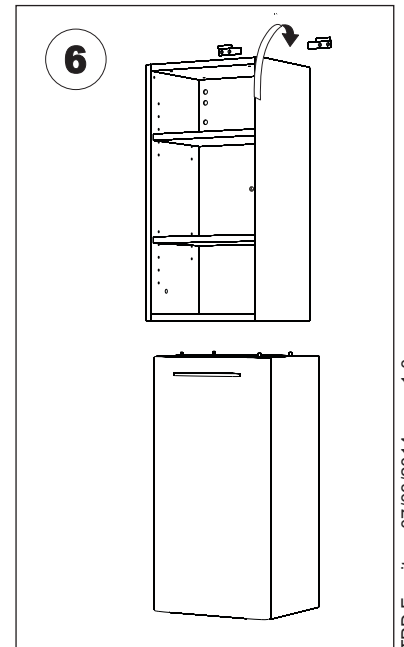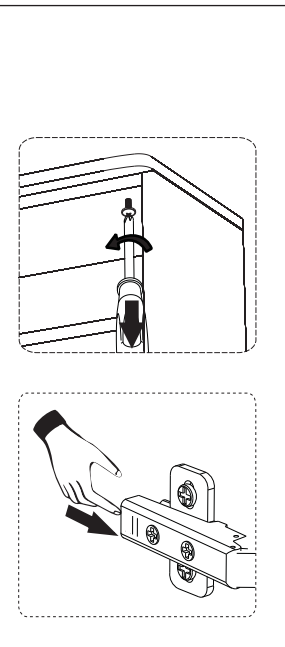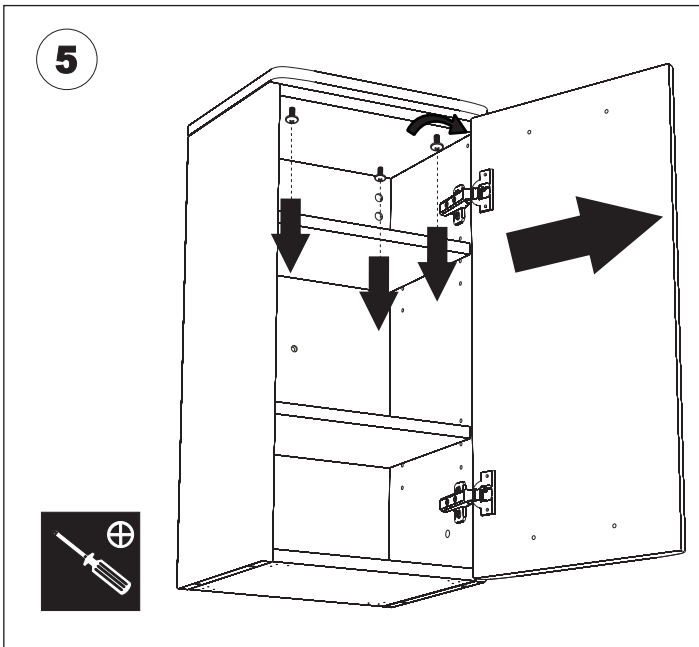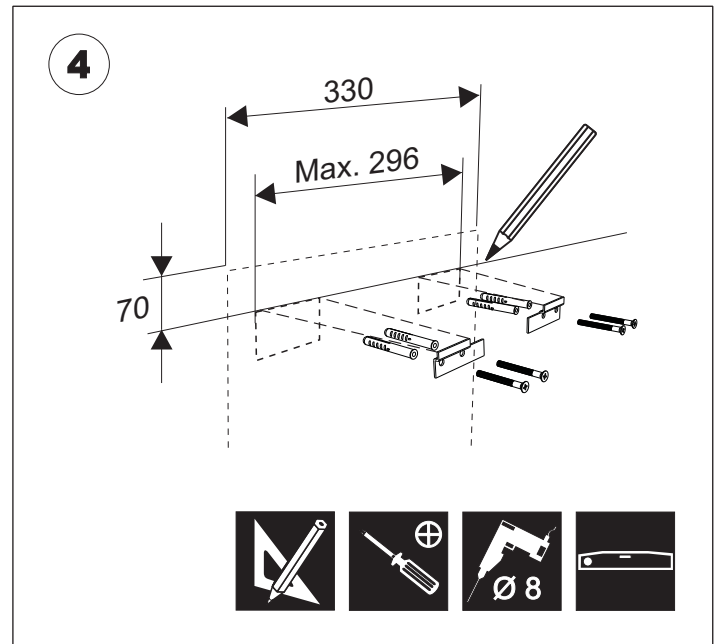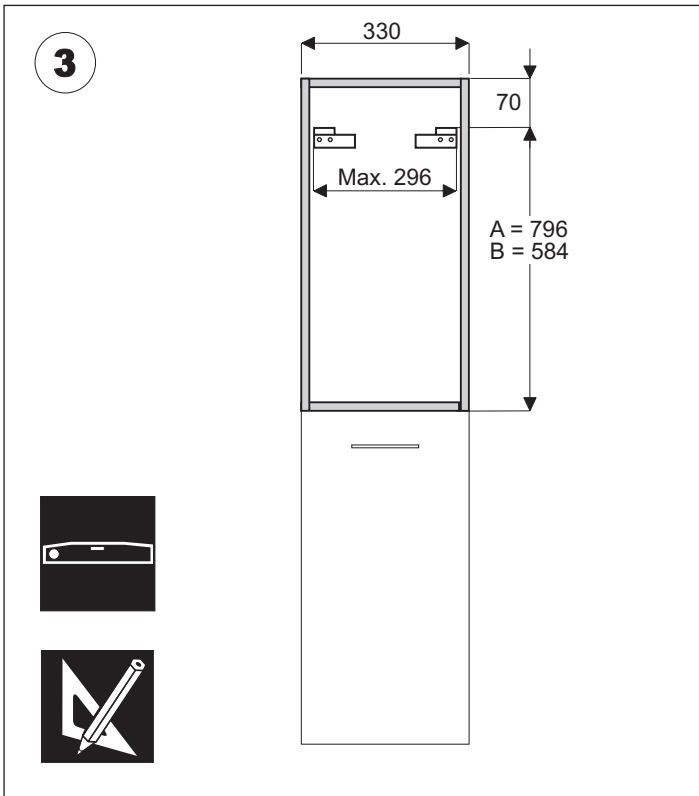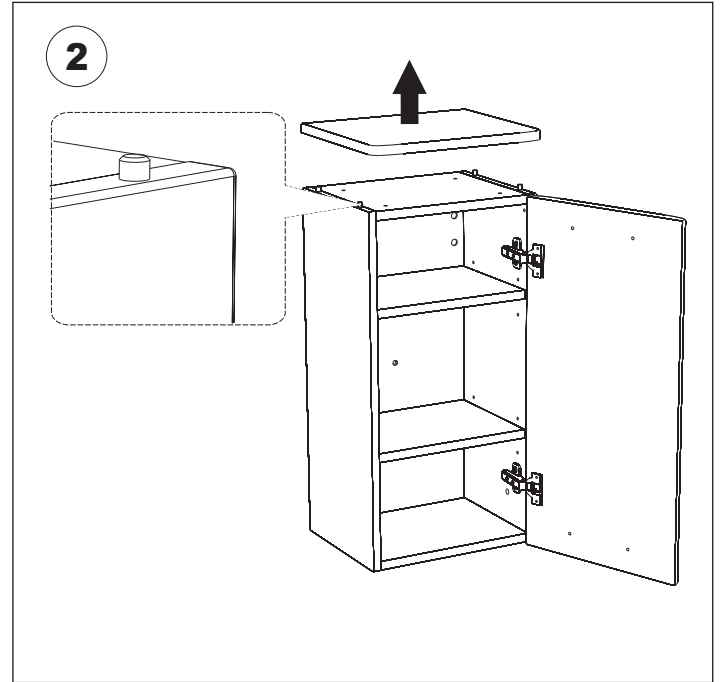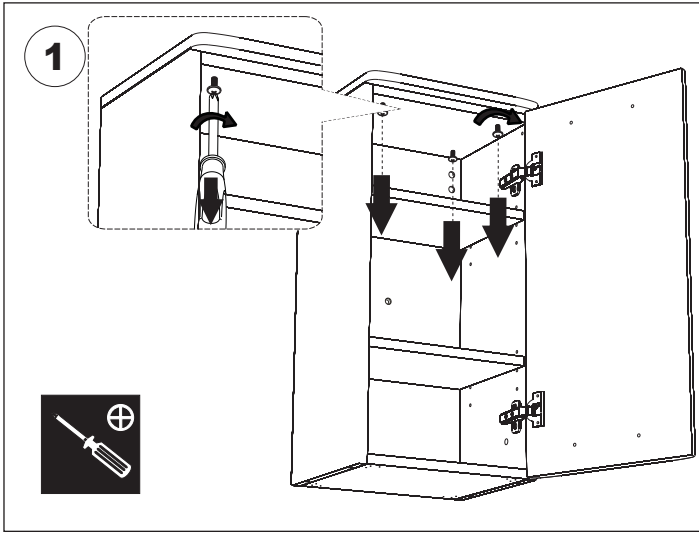


7

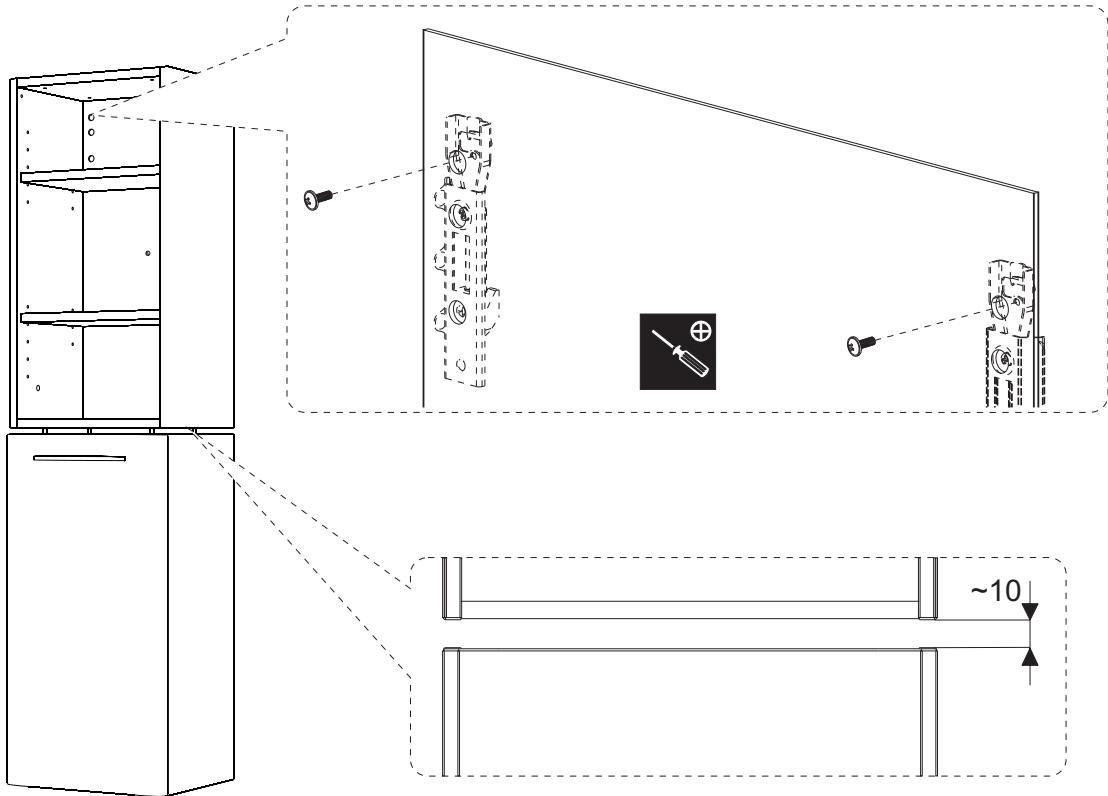

8

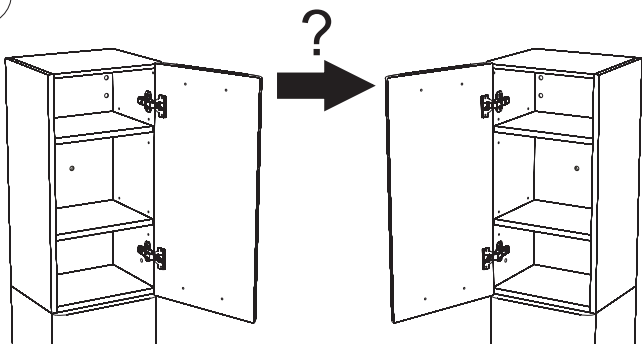

9

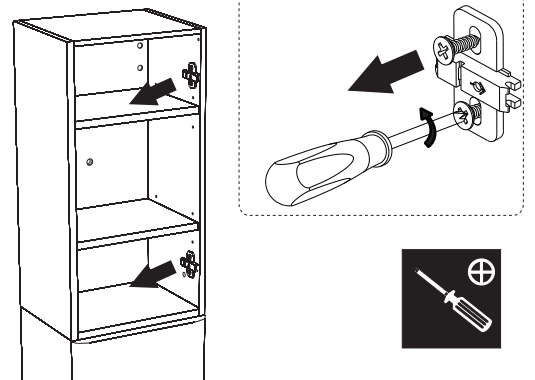

10

