

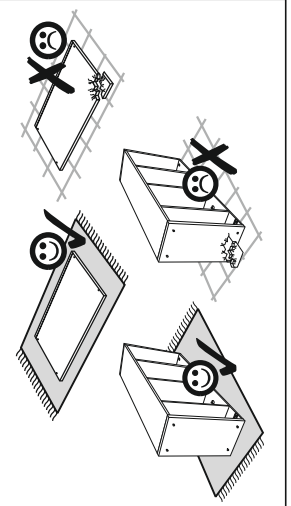
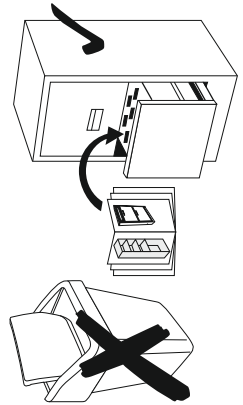
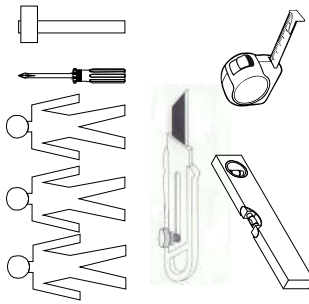
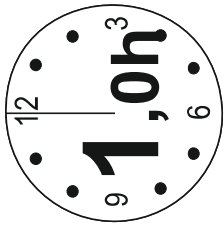
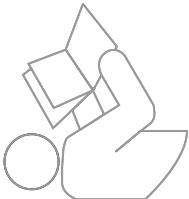
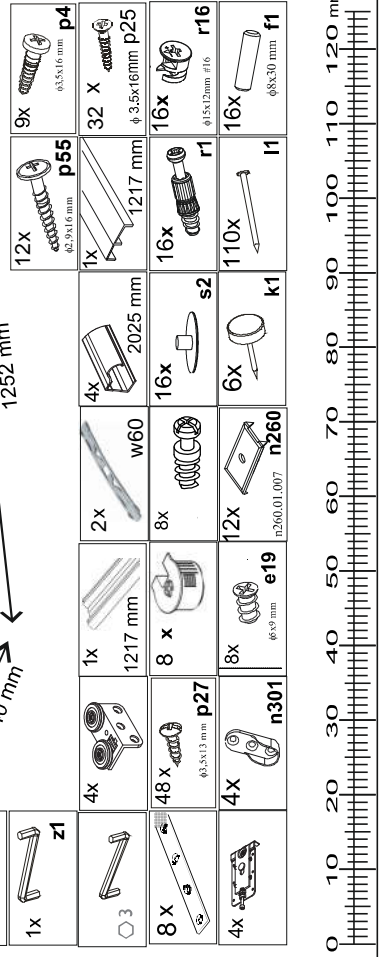


Instalation manual


Wardrobe: 210x125

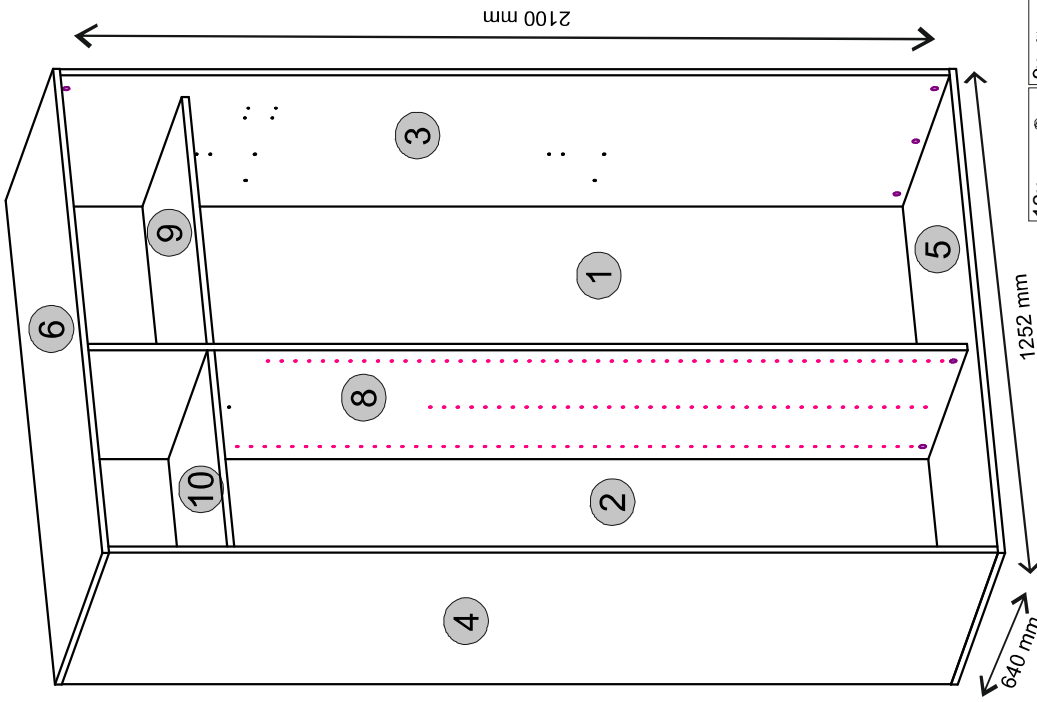


Element symbol	Dimensions	pcs	Code	Package
1	2086	3	SZAF A210x125.001	1/2
2	2086	3	SZAF A210x125.002	1/2
3	2068	16	SZAF A210x125.003	1/2
4	2068	16	SZAF A210x125.004	1/2
5	1252	16	SZAF A210x125.005	2/2
6	1252	16	SZAF A210x125.006	2/2
8	2068	16	SZAF A210x125.008	1/2
9	638	16	SZAF A210x125.009	2/2
10	564	16	SZAF A210x125.010	2/2
12	560	1		
13	634	1		

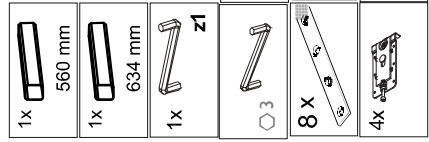


3

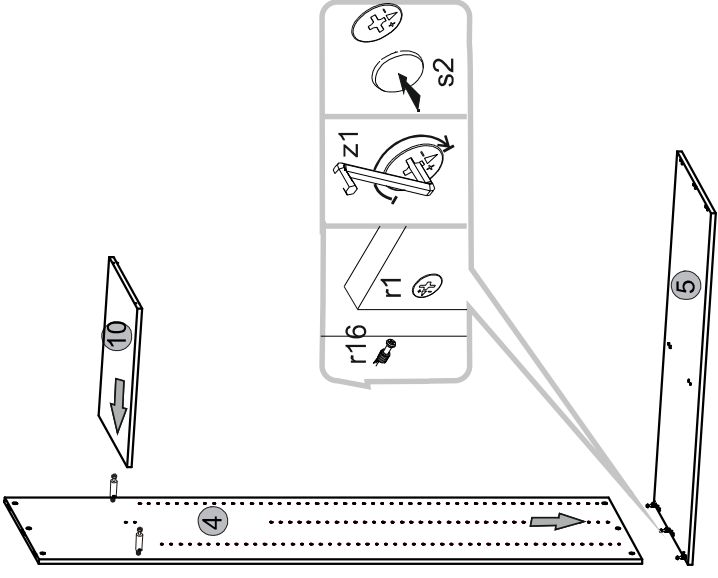


4

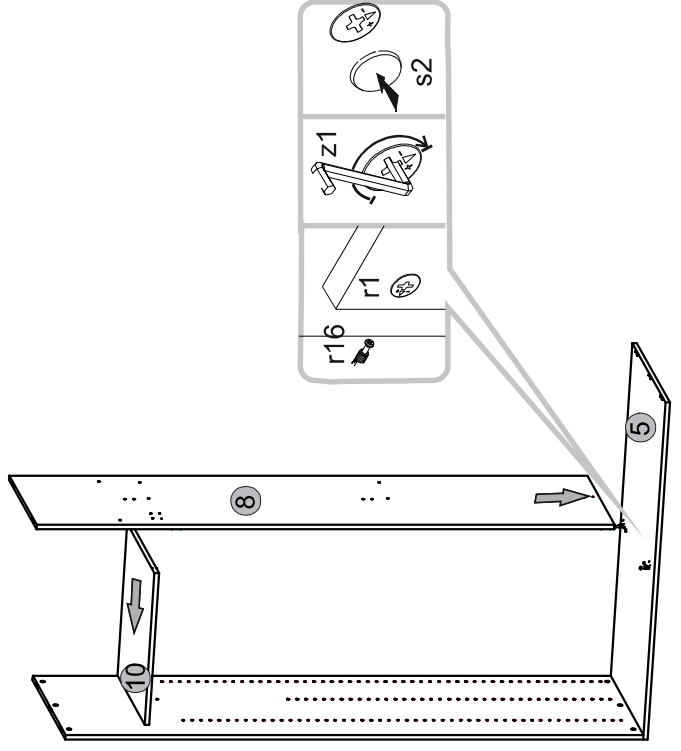


1

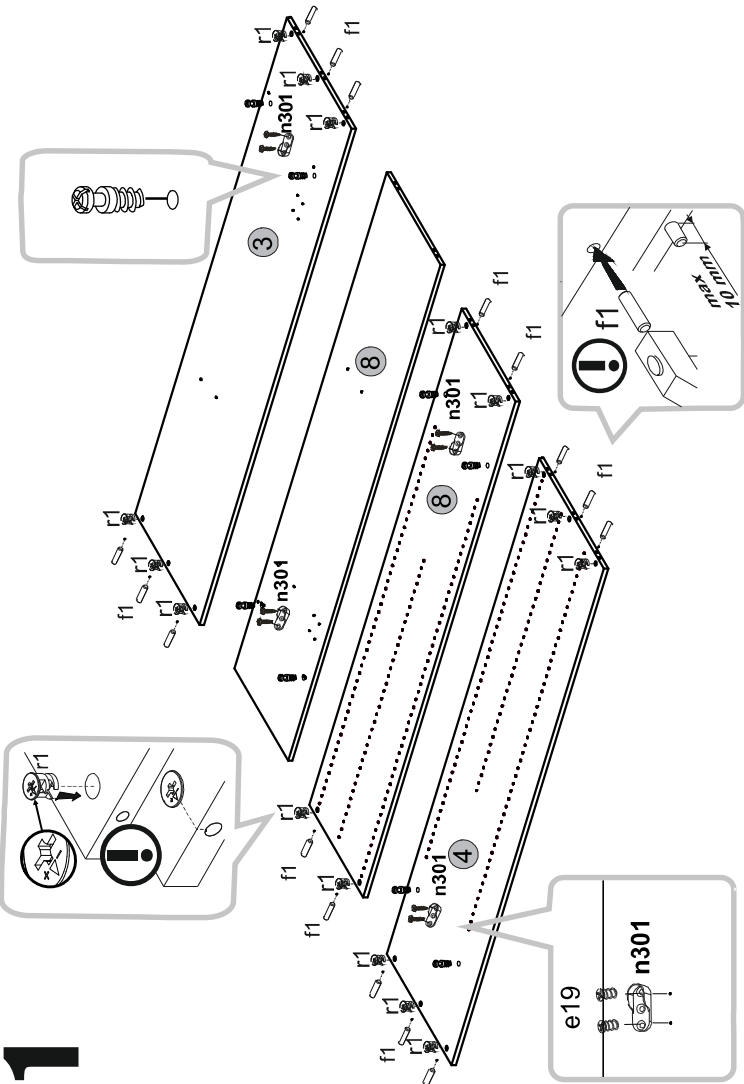


2

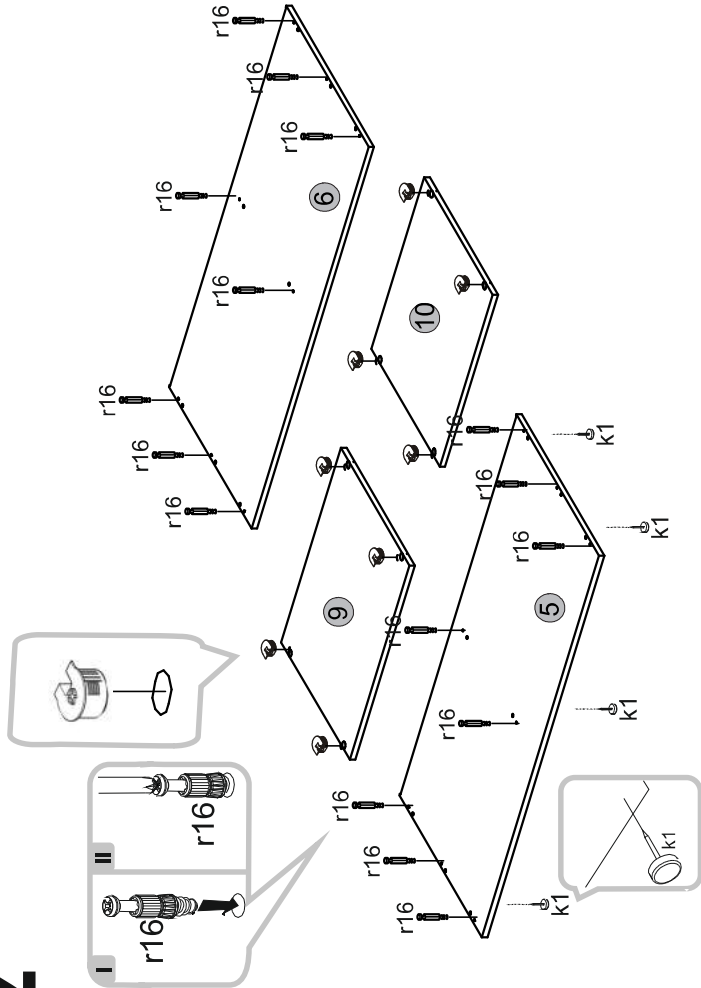


5

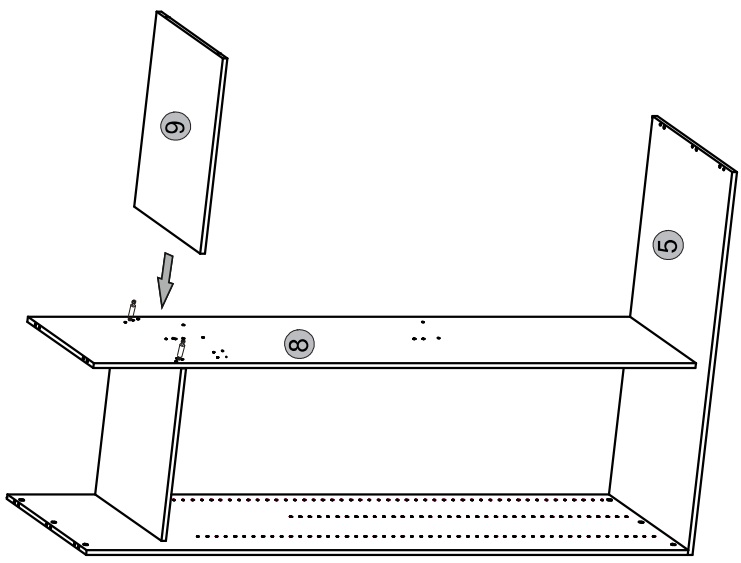


7

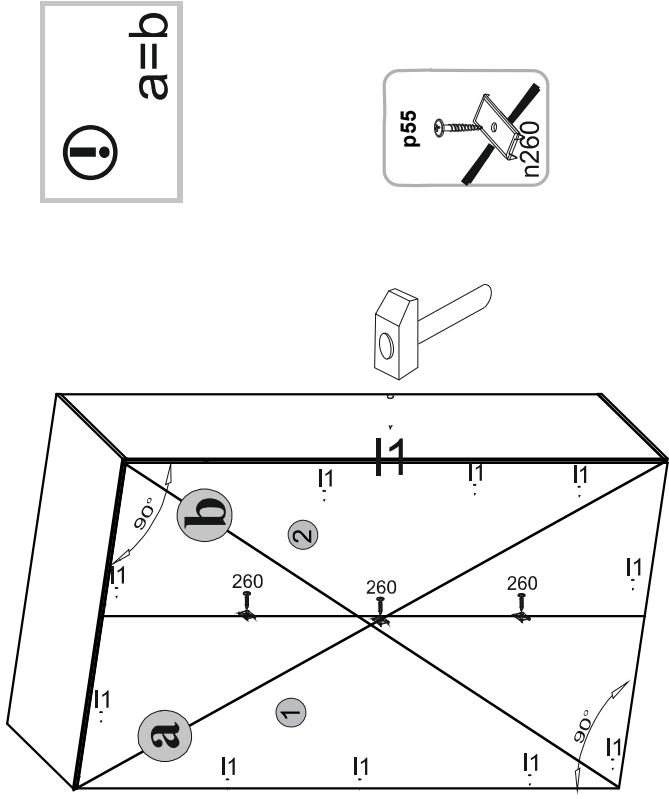

6



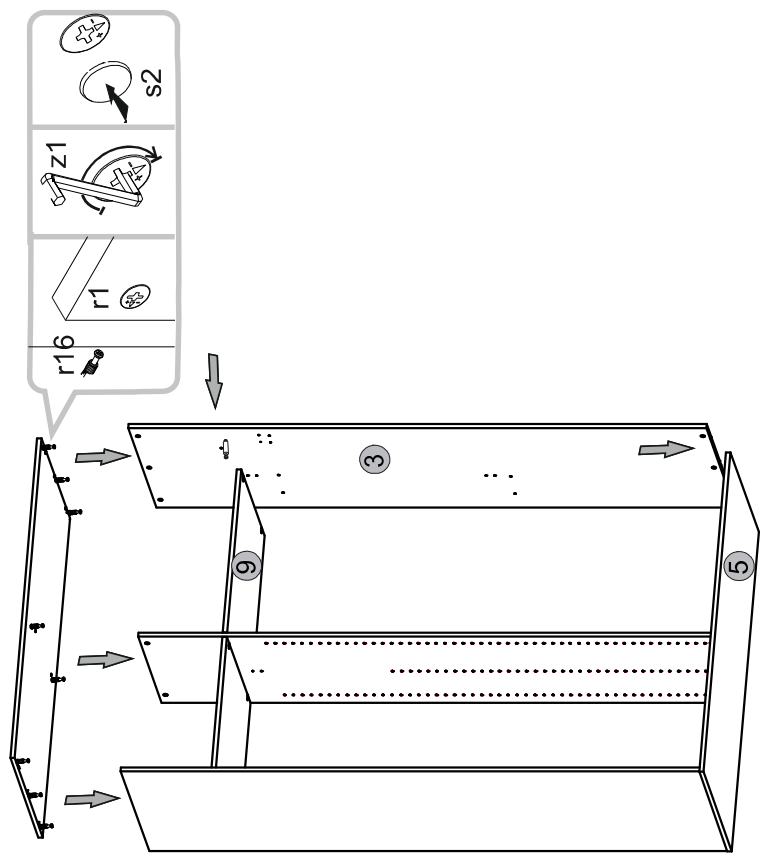


8

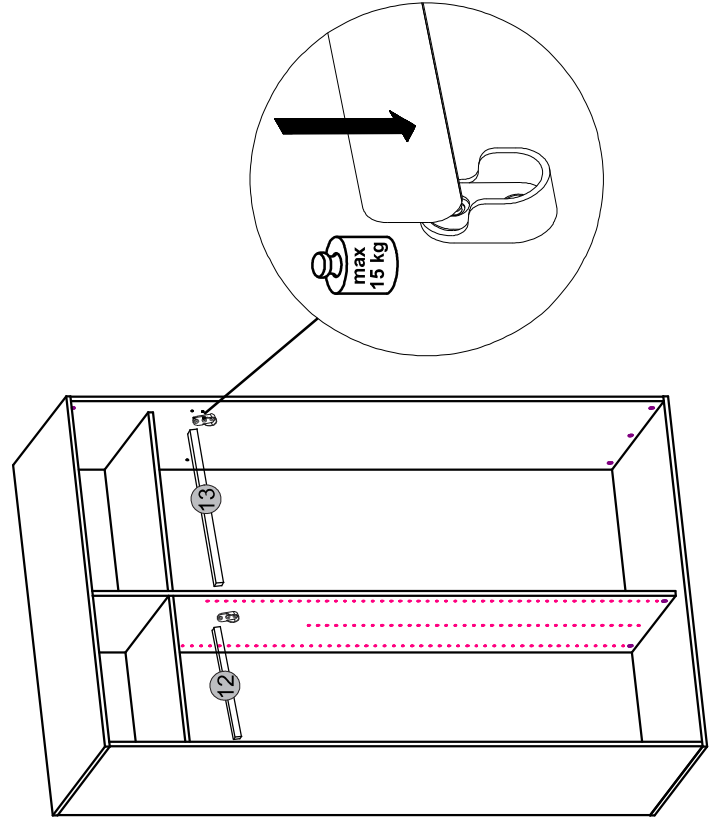

10

Element symbol	Dimensions	pcs	Code	Package
14	624 675 16	4		p.
15	624 675 16	2		p.
16	2025	4		

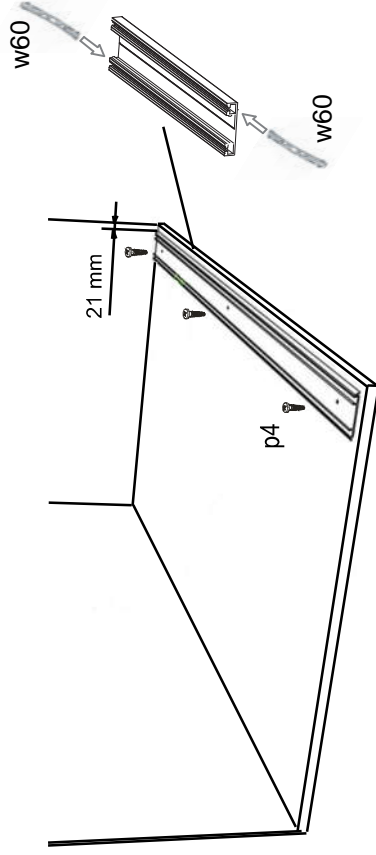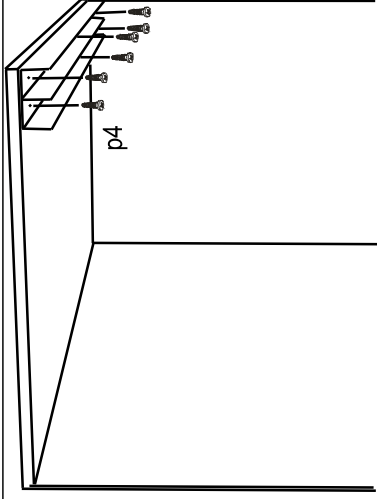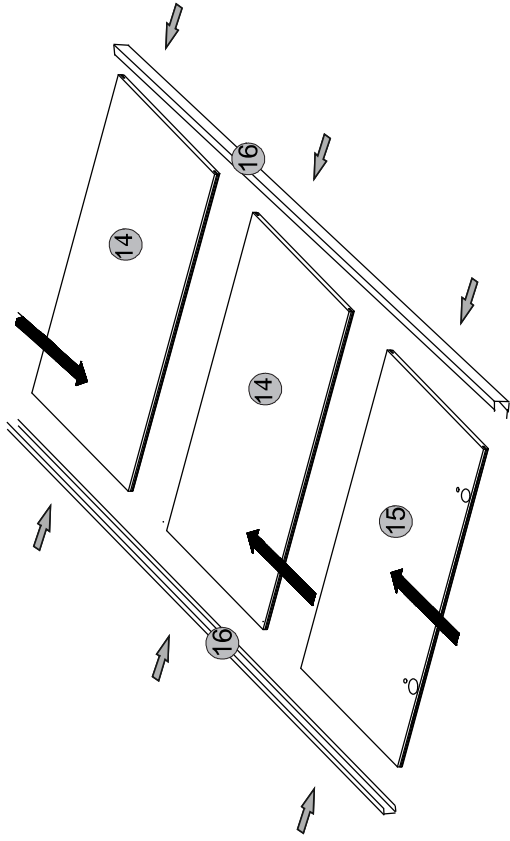

11

