

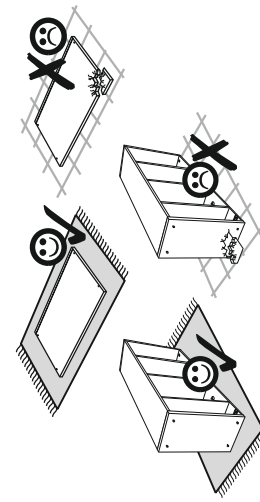
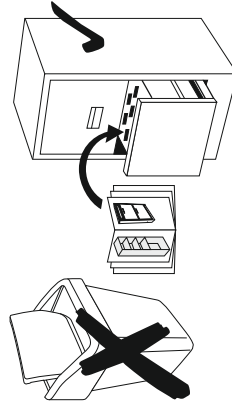
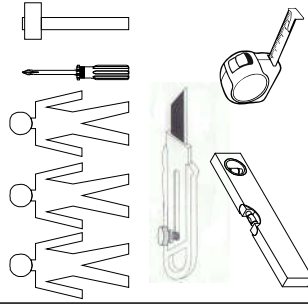
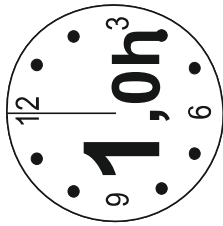


Instalation manual

Wardrobe: 210x182

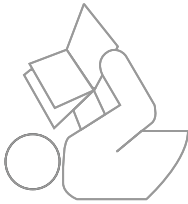


Element symbol	Dimensions	pcs	Code	Package
1	2086 1225 3	1	SZAF A210x182.001	1/3
2	2086 581 3	1	SZAF A210x182.002	1/3
3	2068 640 16	1	SZAF A210x182.003	1/3
4	2068 640 16	1	SZAF A210x182.004	1/3
5	1822 640 16	1	SZAF A210x182.005	2/3
6	1822 640 16	1	SZAF A210x182.006	2/3
8	2068 531 16	1	SZAF A210x182.008	1/3
9	1208 531 16	1	SZAF A210x182.009	3/3
10	564 531 16	1	SZAF A210x182.010	3/3
11	300 531 16	1	SZAF A210x182.011	3/3
12	120 1208 16	1	SZAF A210x182.012	3/3
13	560	1		
14	1204	1		

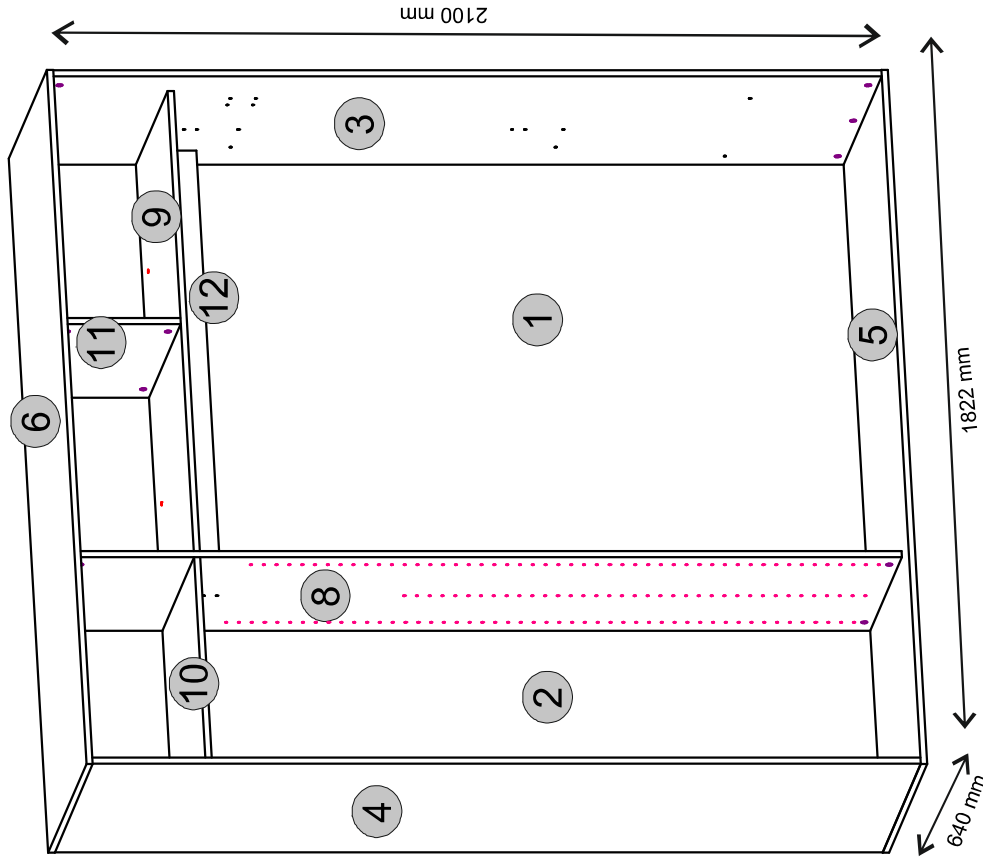


1x	z1	4x	2025 mm	32 X	3.5x16mm	p25	1x	560 mm	1x	1204 mm	9x	6.3x16 mm	p4	12x	6.3x16 mm	p55
3	3	130x	l1	8x	6x9 mm	e19	48x	4.5x13 mm	2x	w60	1x	1787 mm	1x	1787 mm	1x	1787 mm
4x	4x	4x	n301	20x	20x	s2	2x	6.7x50 mm	2x	s1	8 X	1787 mm	12x	n260.01.007	12x	n260
4x	4x	6x	k1	20x	20x	r1	20x	4.5x12mm r16	8 x	r16	8x	8x	24x	6.8x30 mm	f1	f1




3

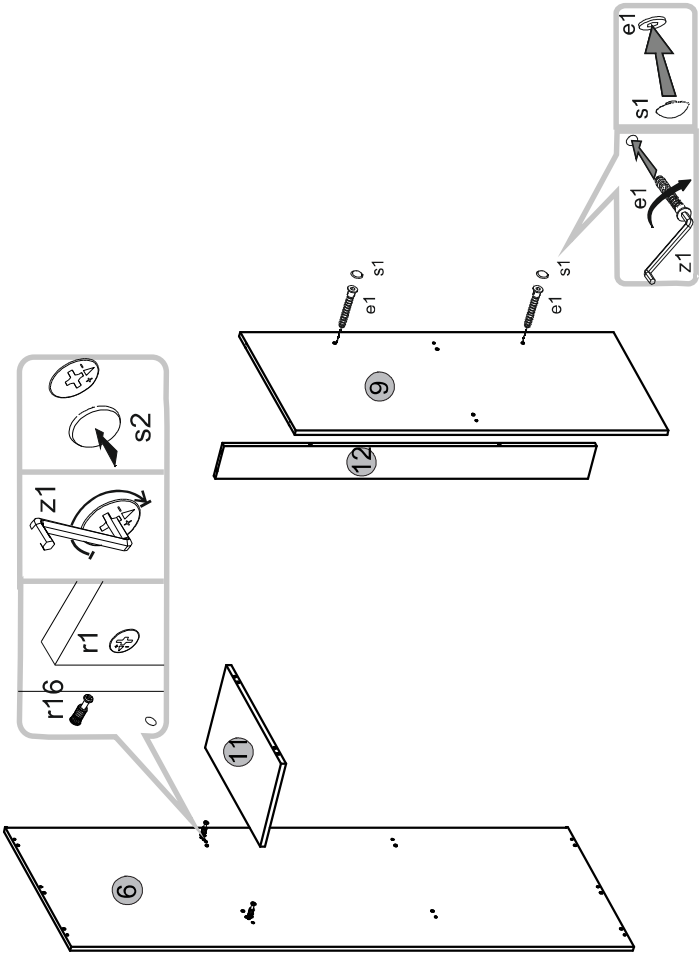


4

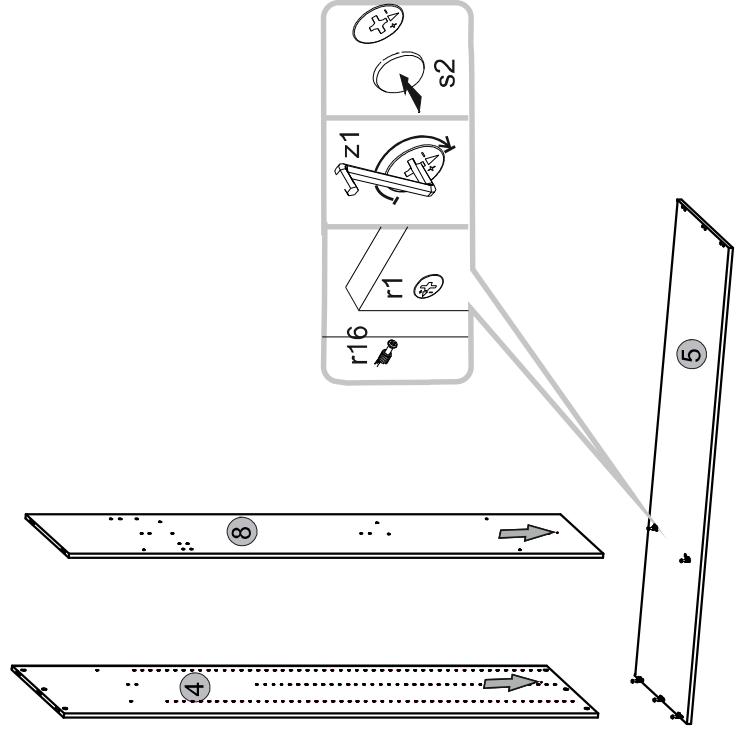


1

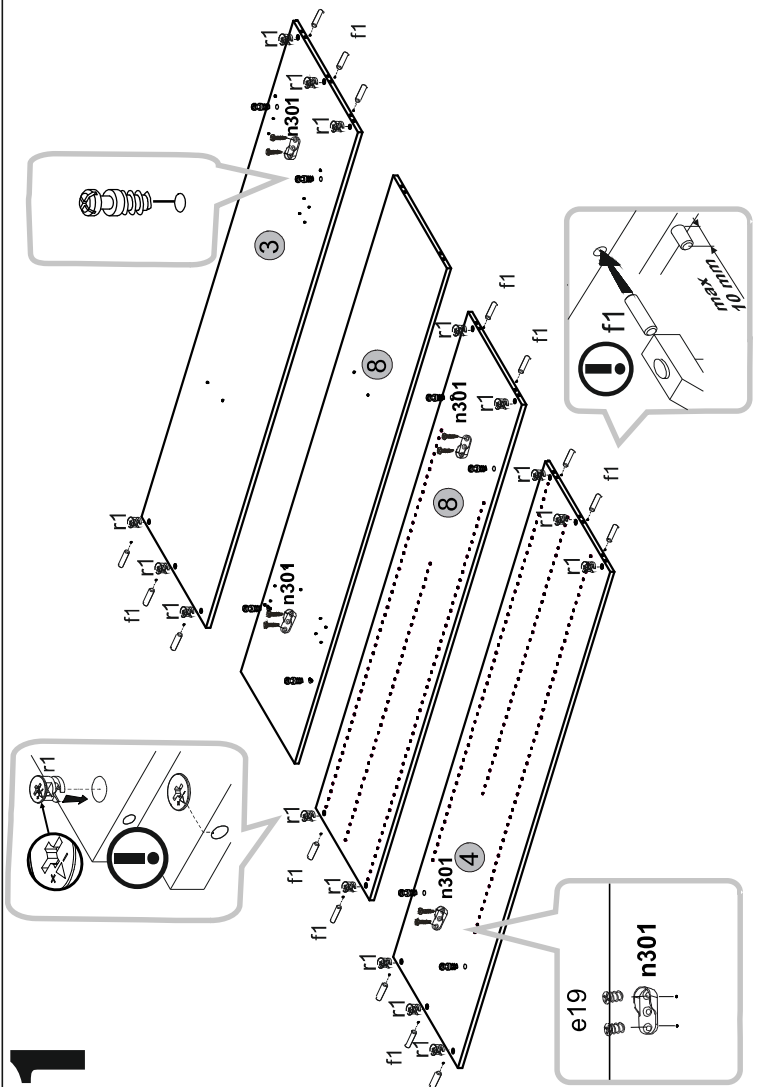


2

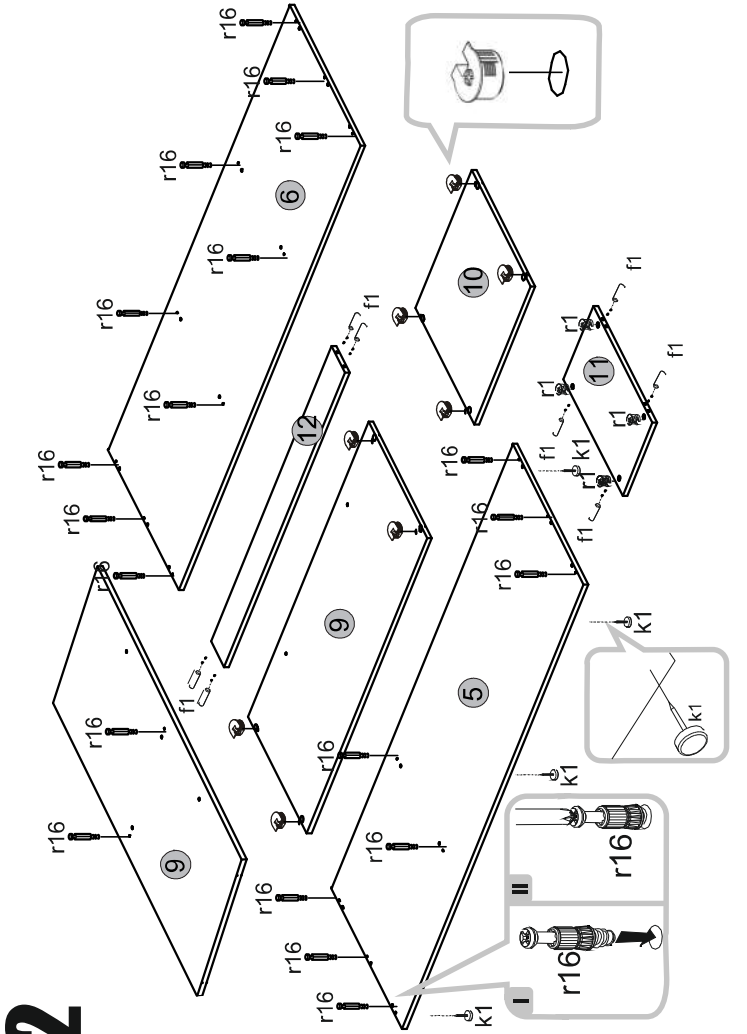


7

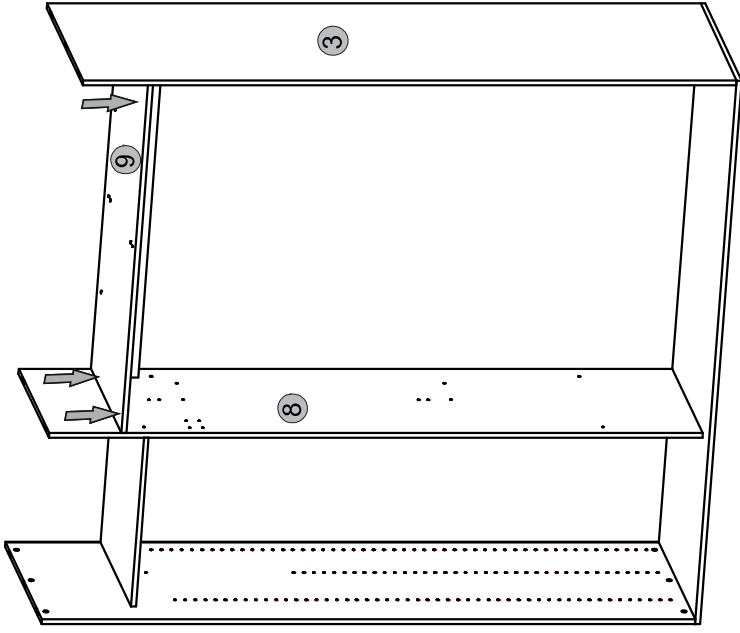


8

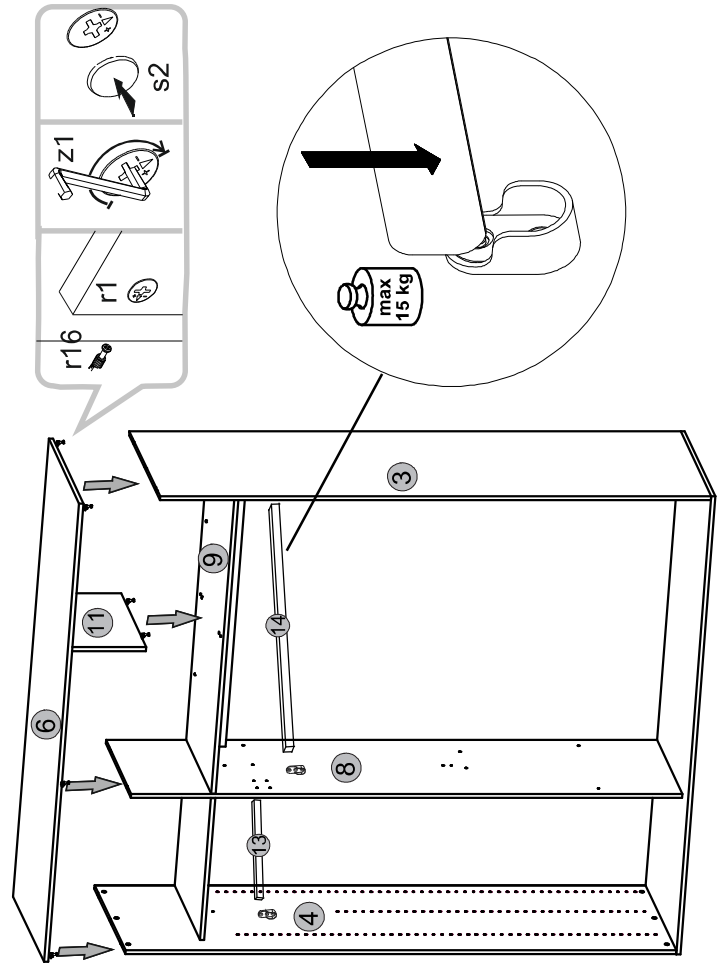



5

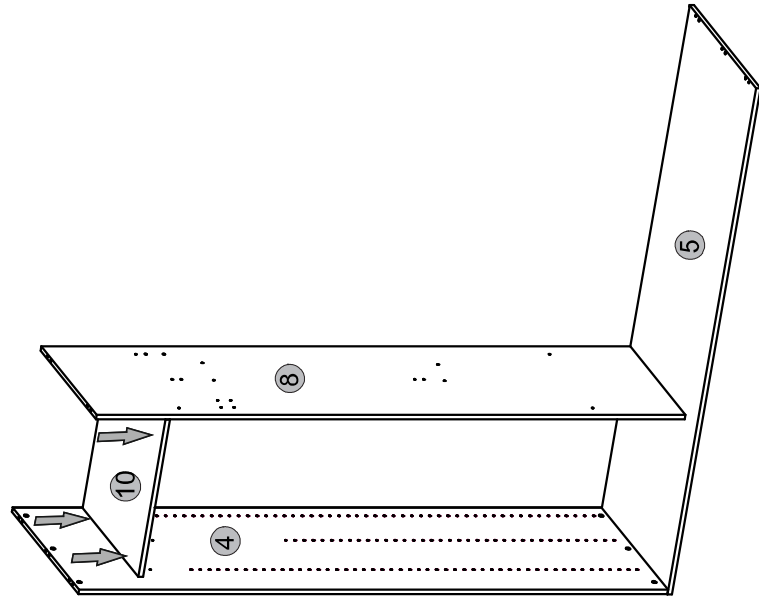


6

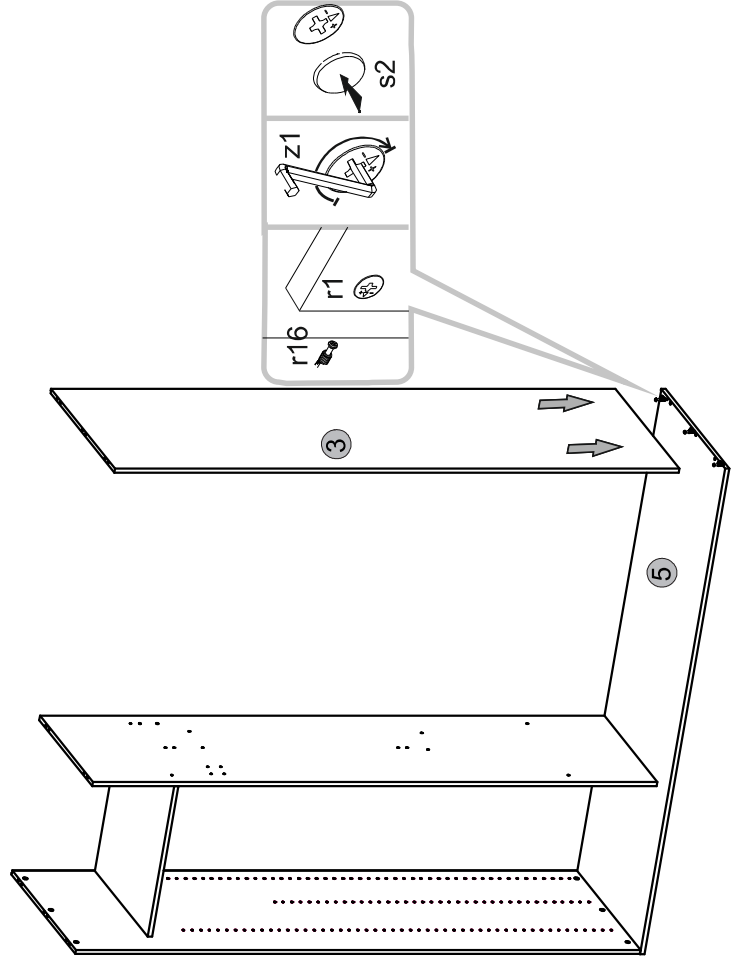

9

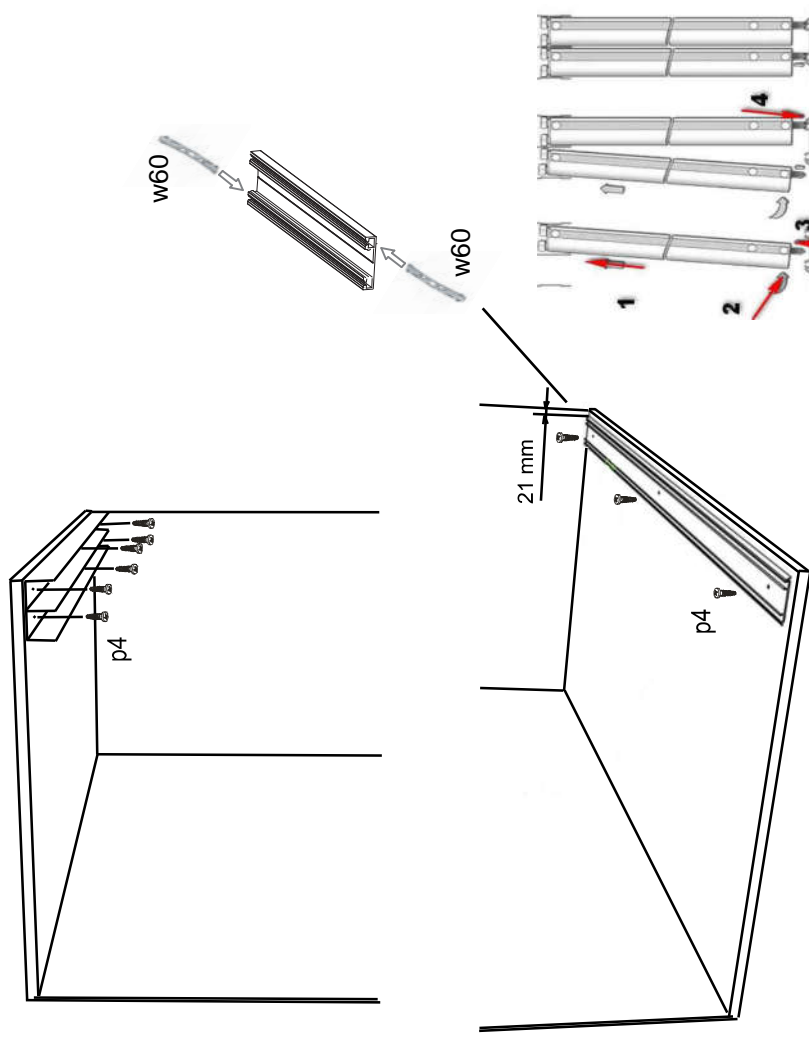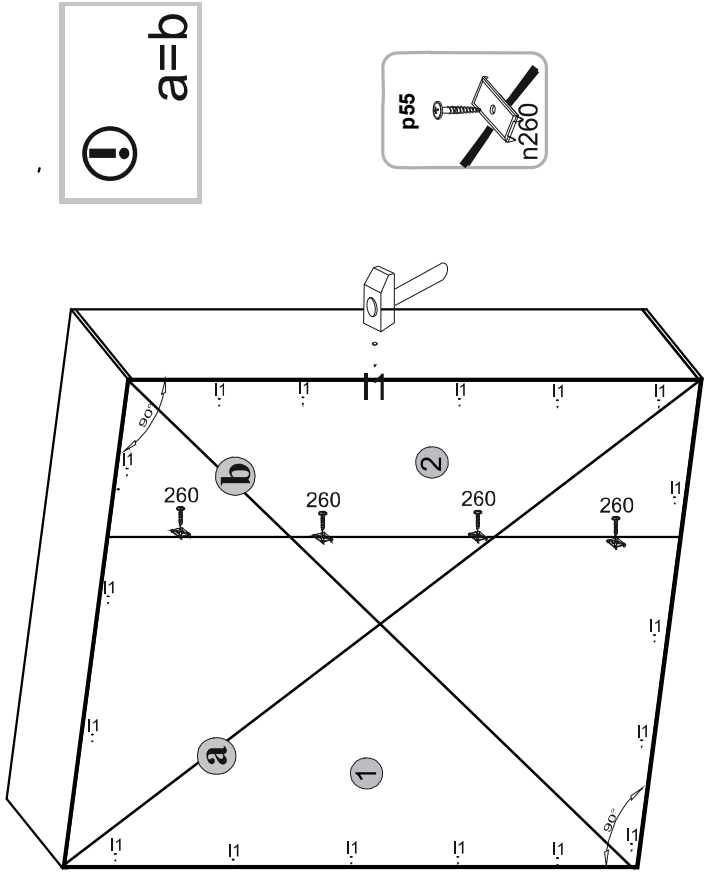

10

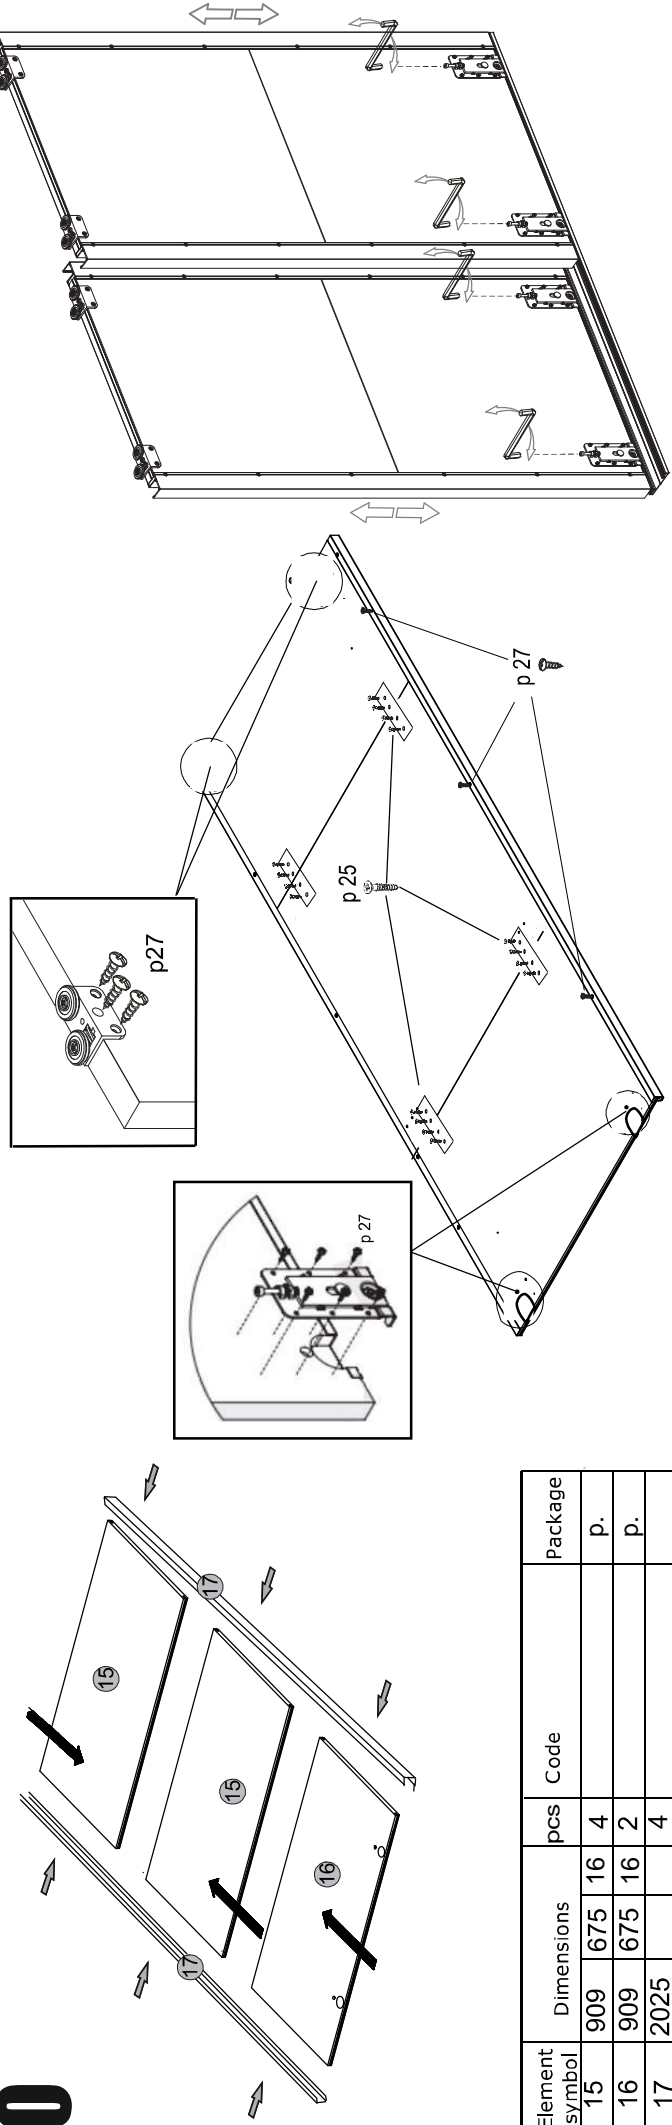

Element symbol	Dimensions	pcs	Code	Package
15	909 675 16	4		p.
16	909 675 16	2		p.
17	2025	4		