

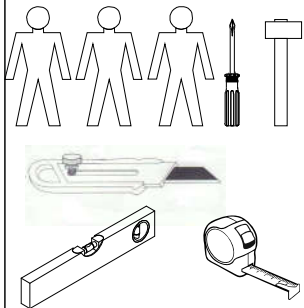
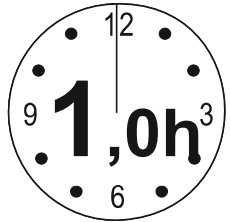
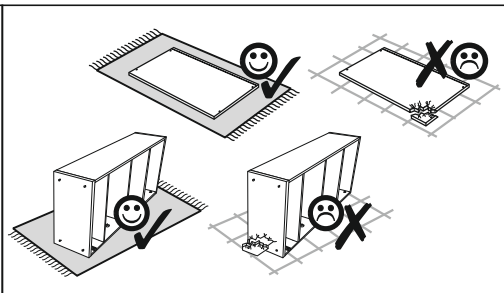
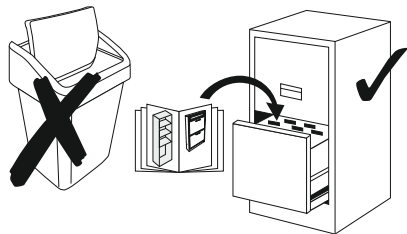


Instalation manual


Wardrobe: 210x200

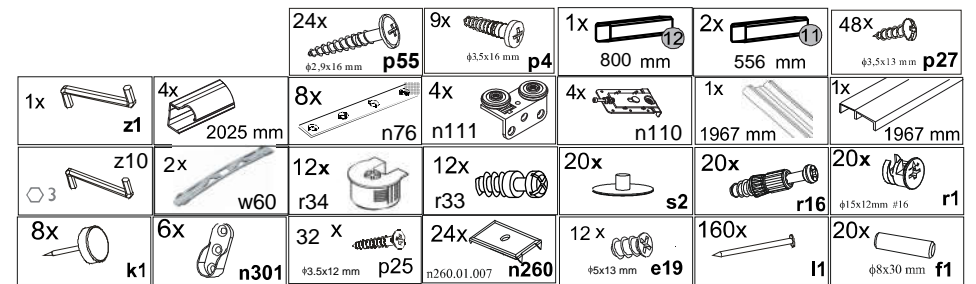


Element symbol	Dimensions			pcs	Code	Package
1	2086	824	3	1	SZAFKA210x200.001	1/4
2	2086	581	3	2	SZAFKA210x200.002	1/4
3	2068	640	16	1	SZAFKA210x200.003	1/4
4	2068	640	16	1	SZAFKA210x200.004	1/4
5	2002	640	16	1	SZAFKA210x200.005	3/4
6	2002	640	16	1	SZAFKA210x200.006	3/4
7	2068	531	16	1	SZAFKA210x200.007	2/4
8	2068	531	16	1	SZAFKA210x200.008	2/4
9	808	531	16	1	SZAFKA210x200.009	4/4
10	564	531	16	2	SZAFKA210x200.010	4/4
11	556			2		
12	800			1		




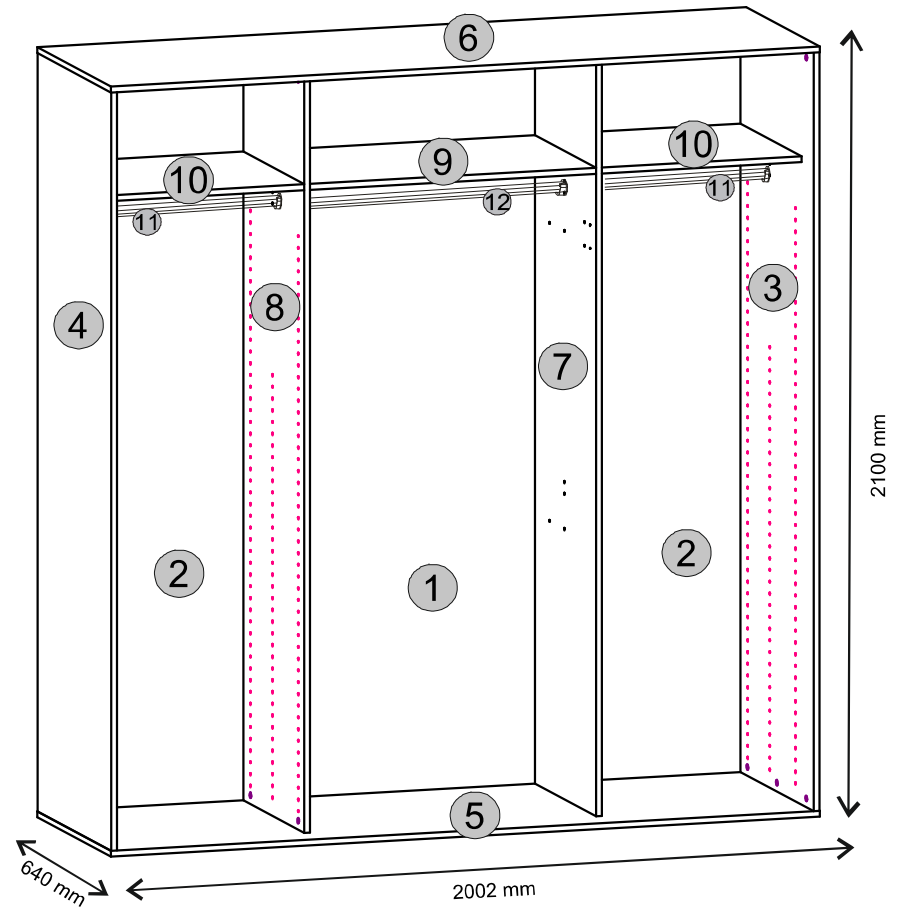






1

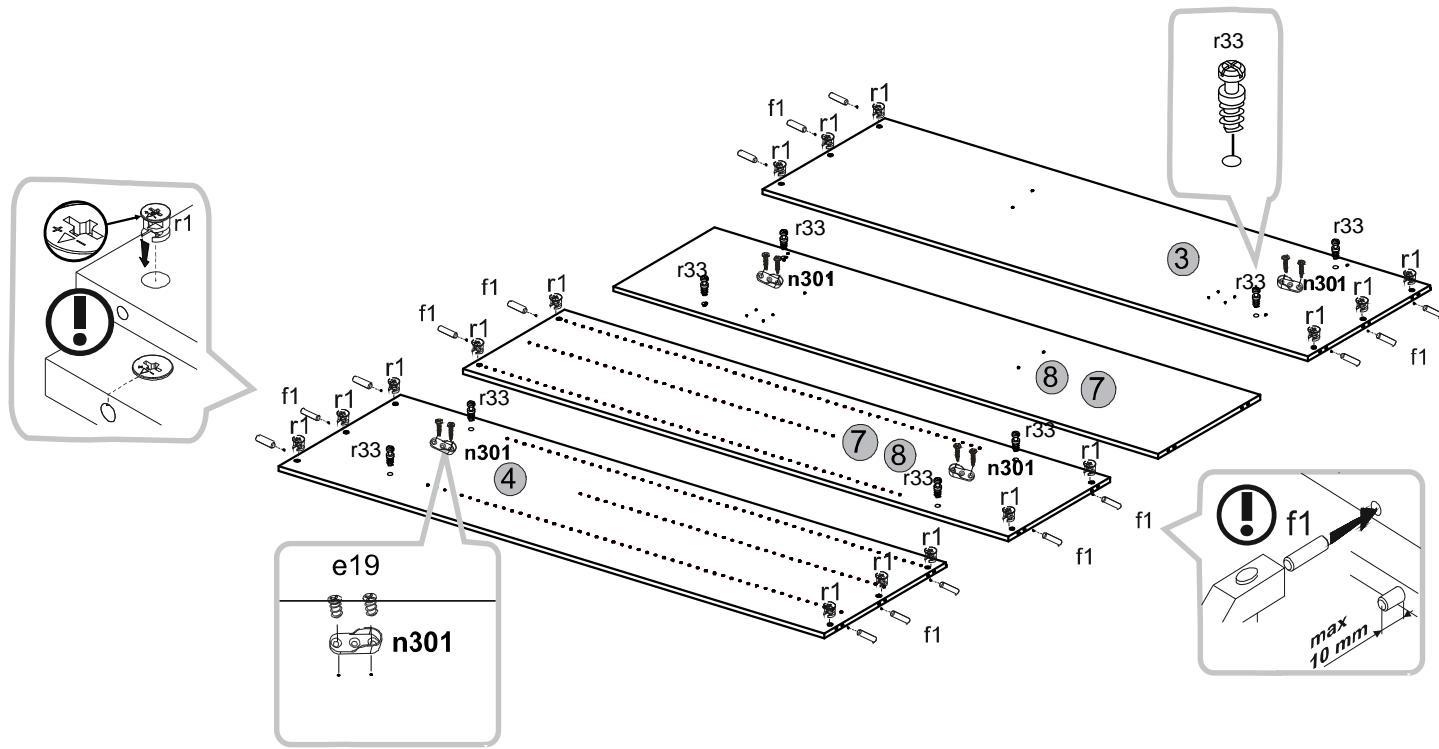

2




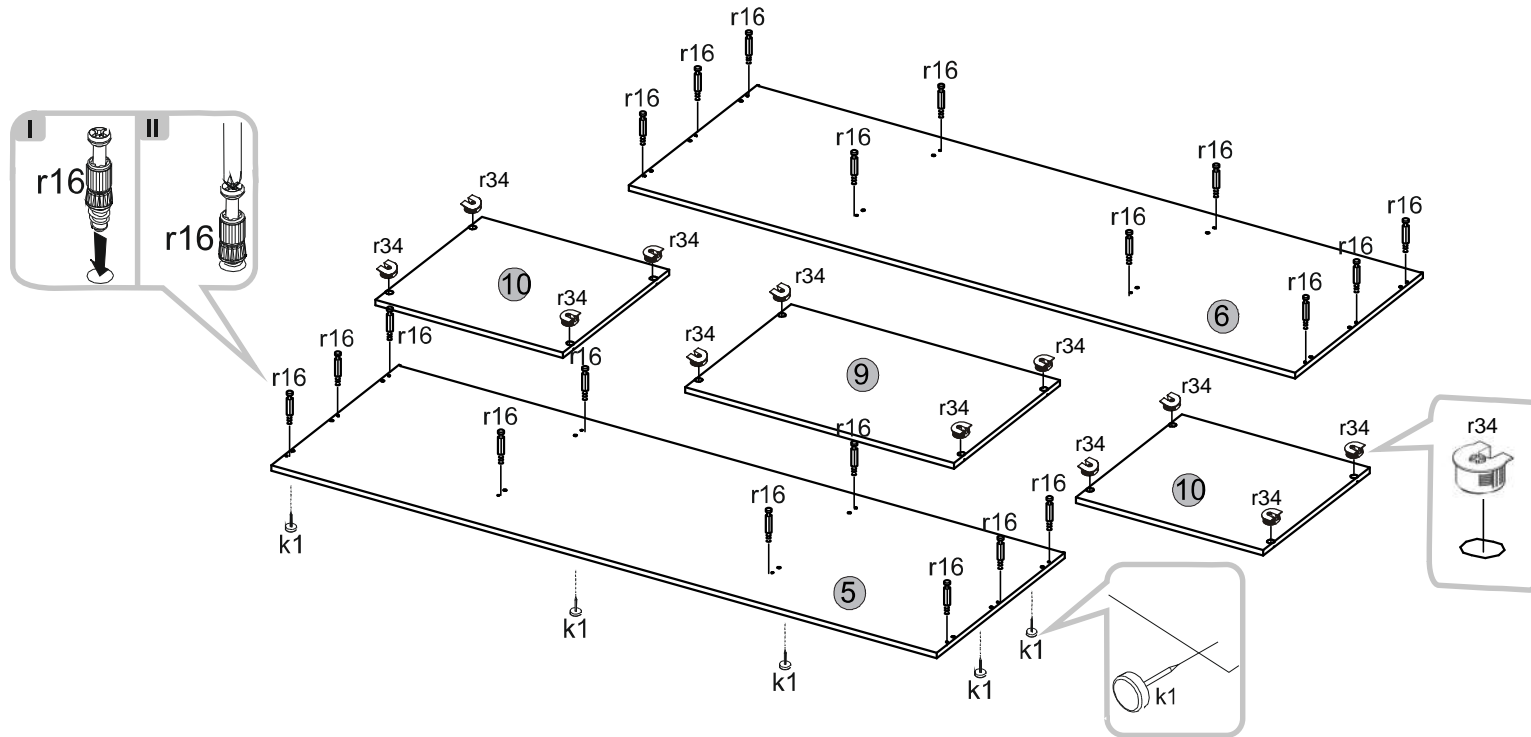


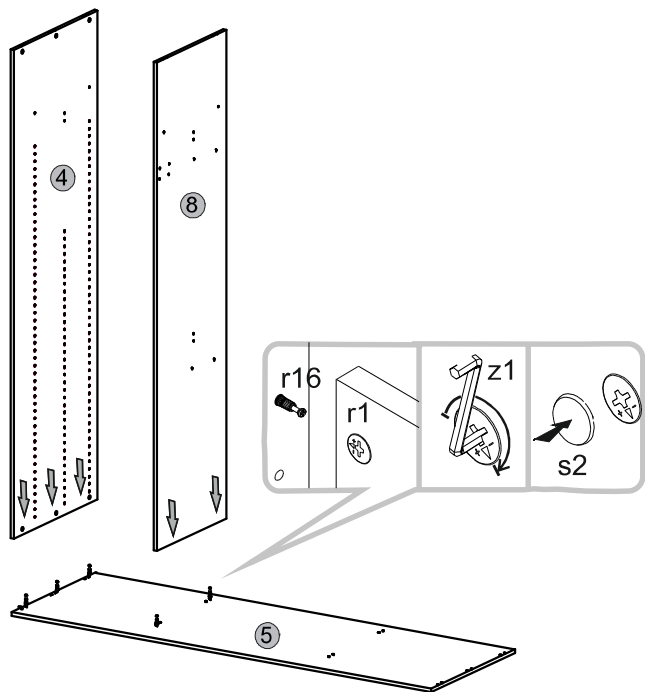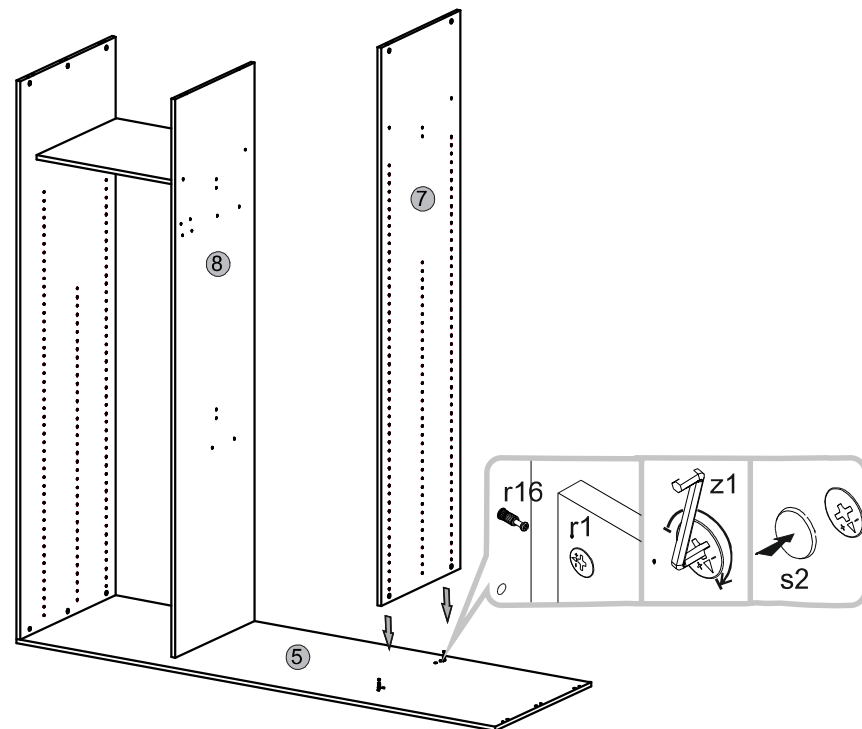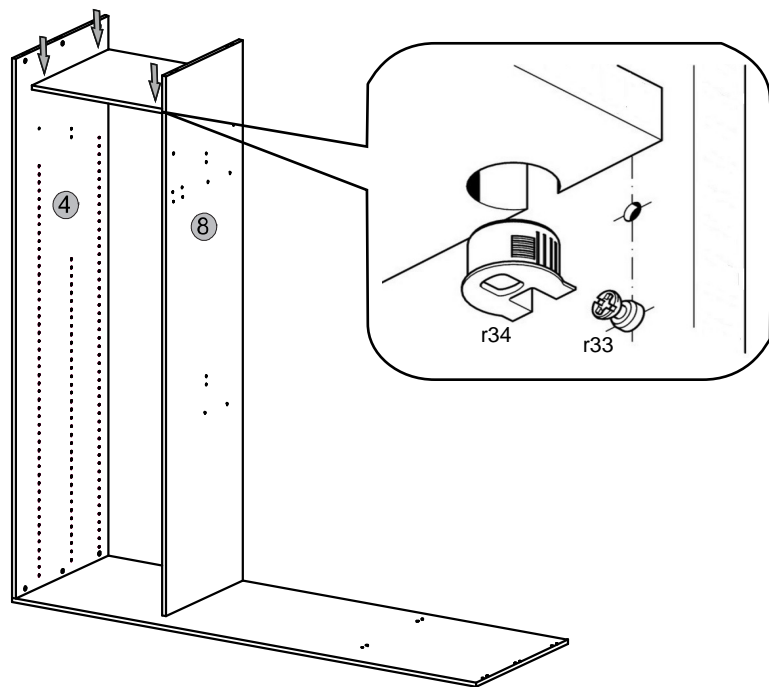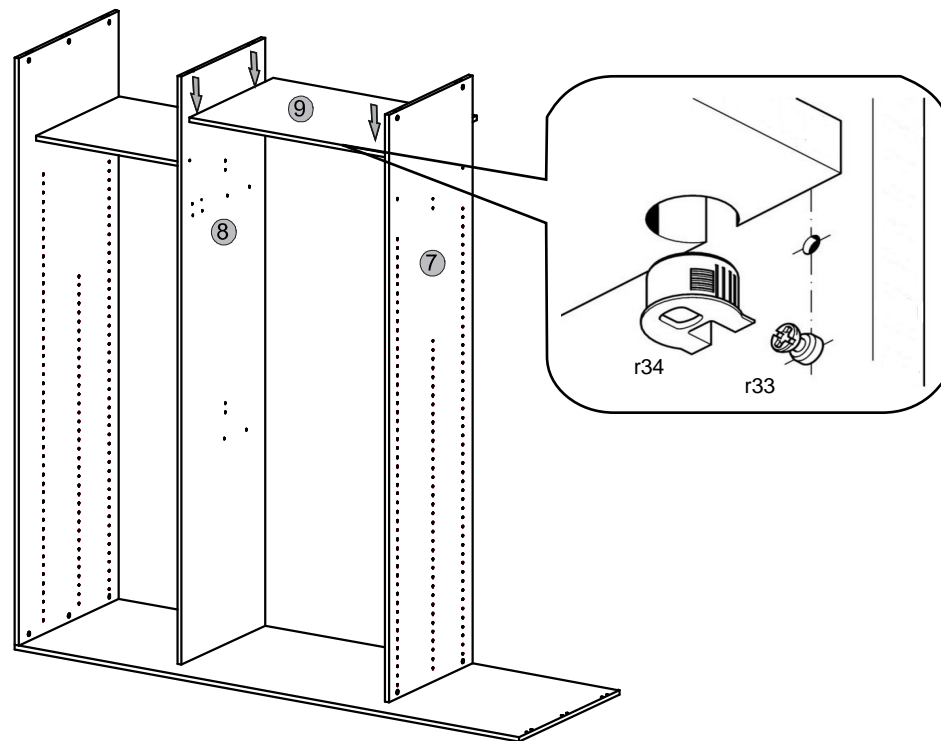3**5****4****6**

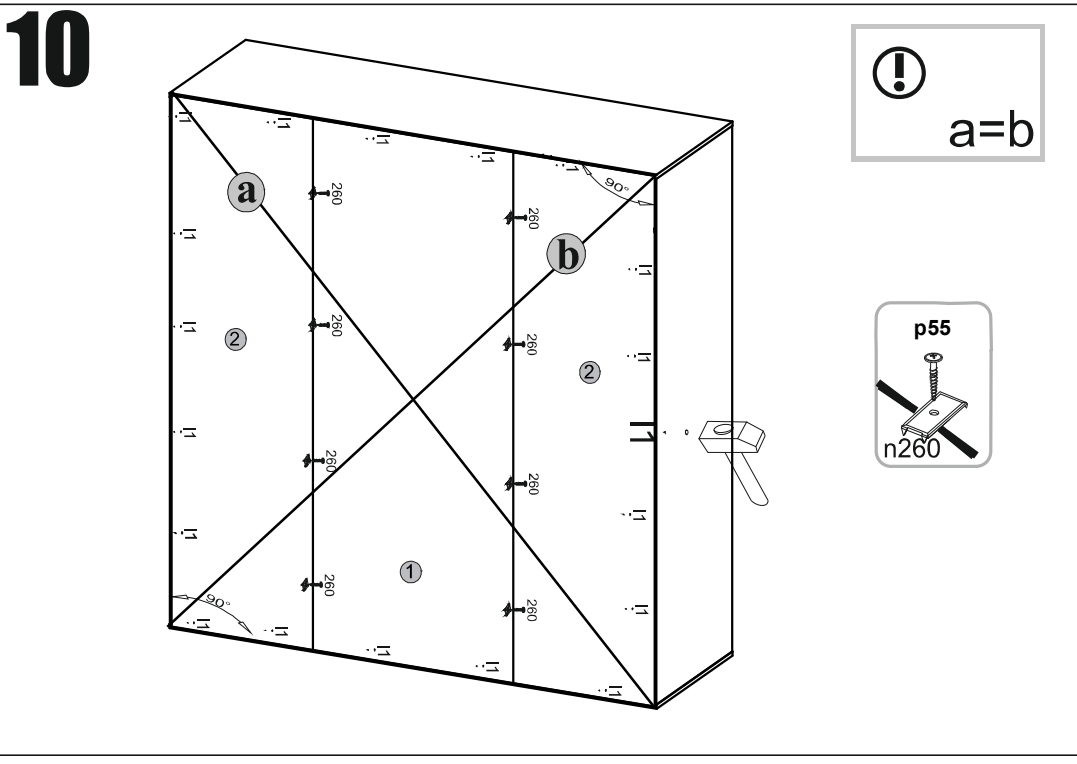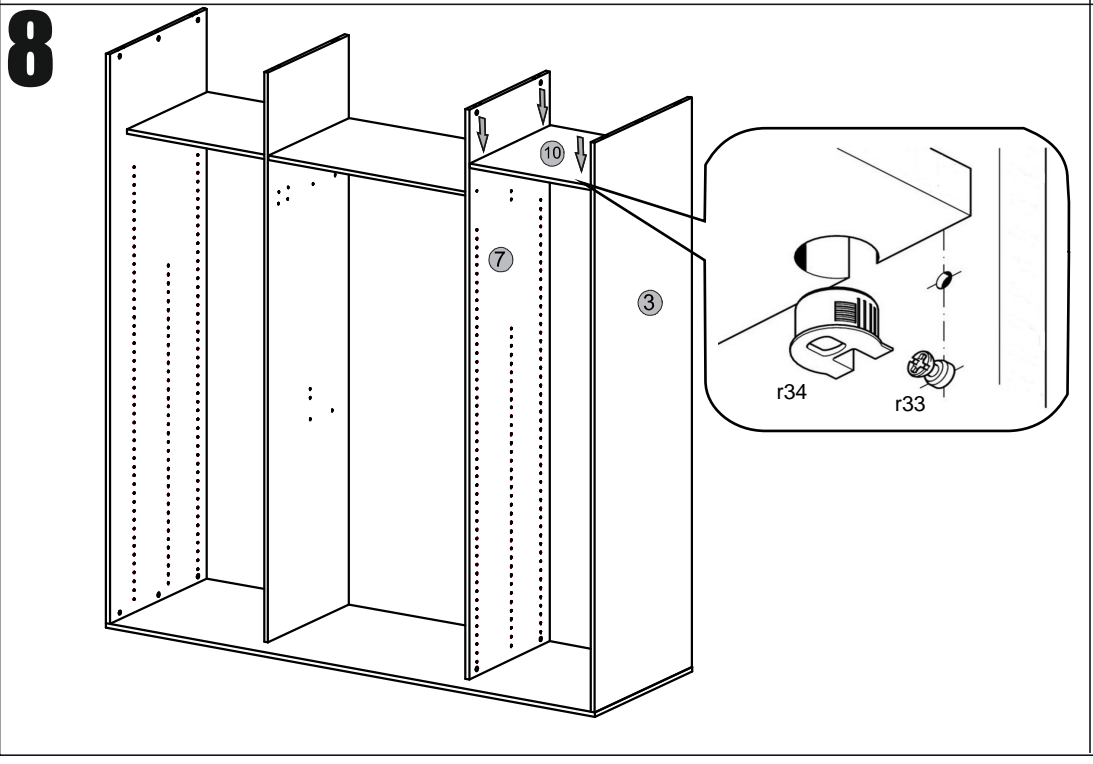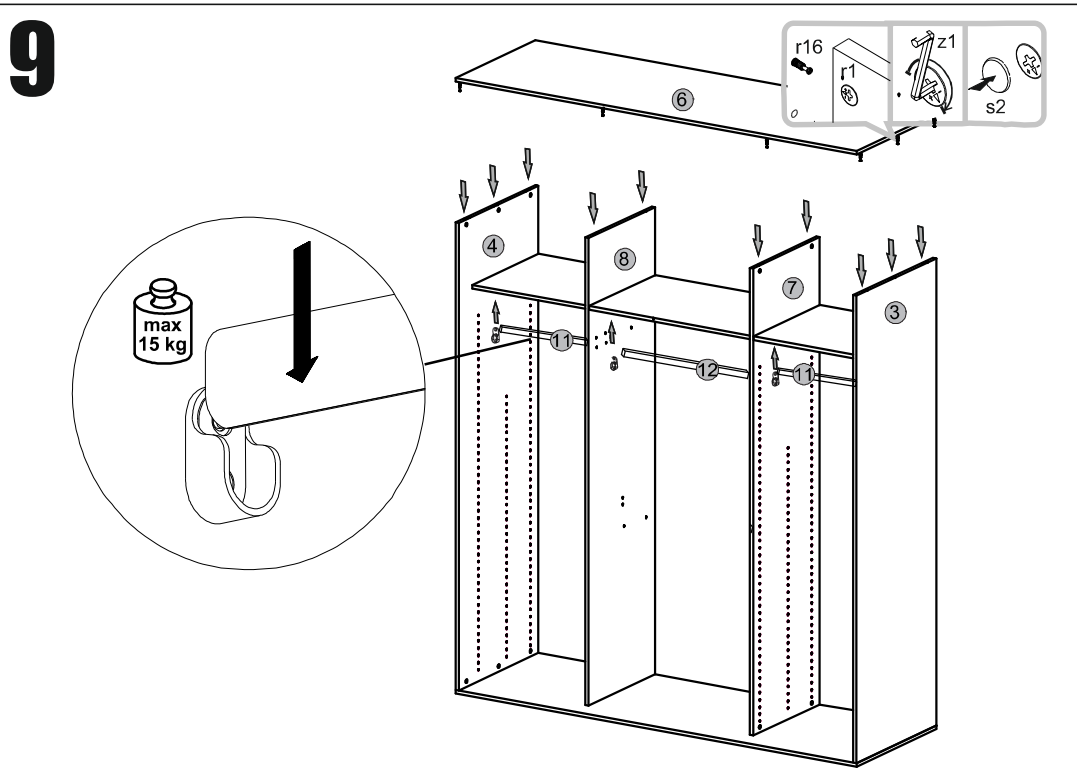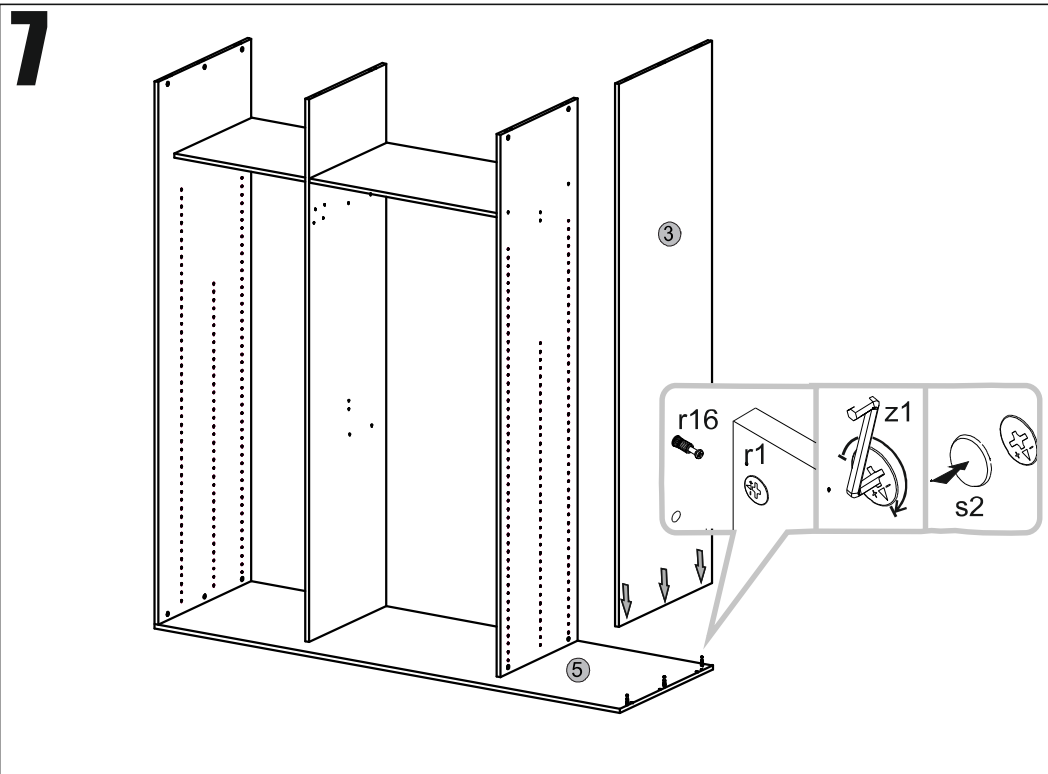

11

Element symbol	Dimensions			pcs	Code	Package
13	999	675	16	4		p.
14	999	675	16	2		p.
15	2025			4		

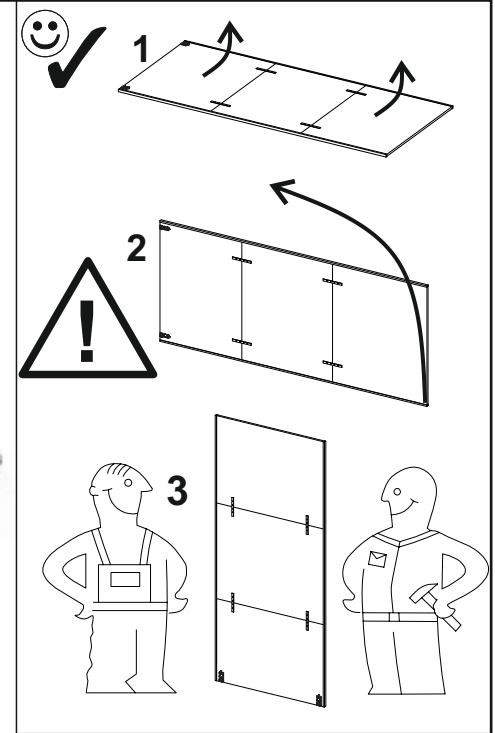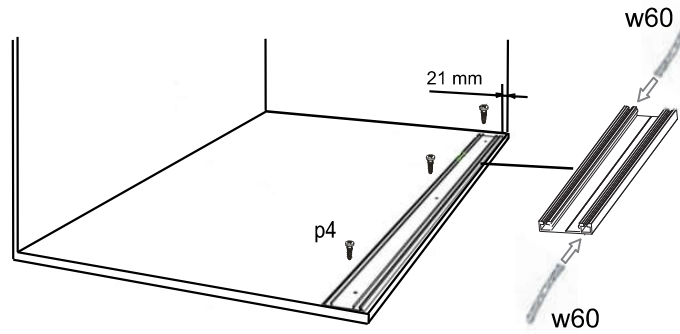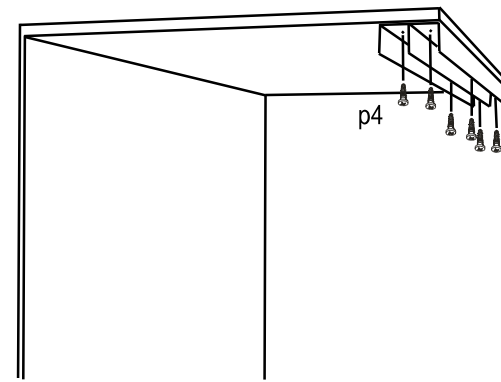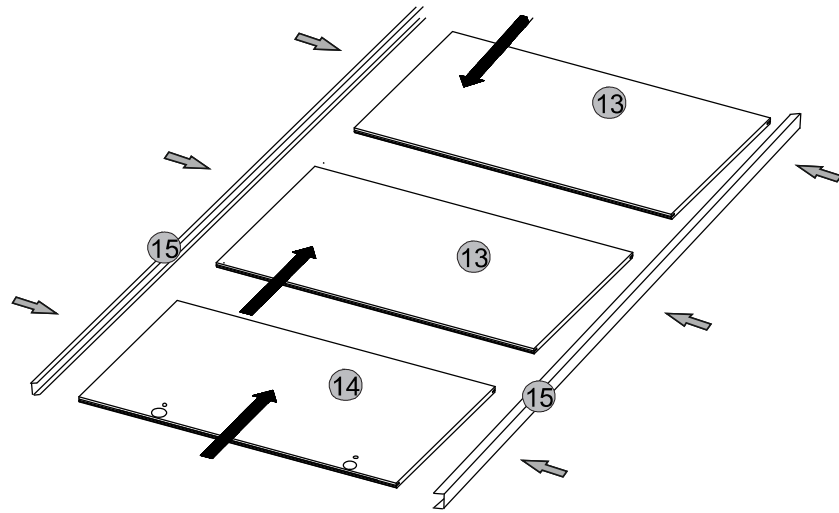

12

